


How to connect IR-Emitter to a Biamp Control System

Connect white striped side of the cable to TX/IR (never use TX-1, which cannot send IR). Connect black side of the cable to GND.

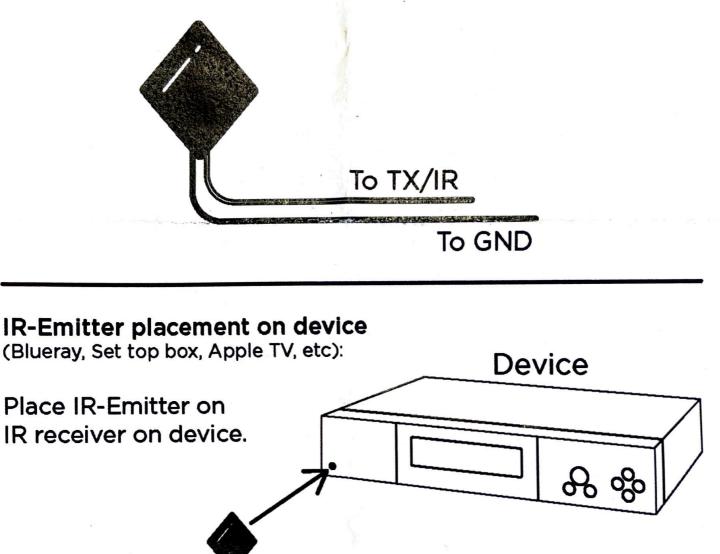

Clear adhesive layer placed toward device (Replace, if necessary, with supplied 2-sided tape)

Doc# April22 Version 1 Assembled in Denmark www.biamp.com

