

APart


ACP - ACPL
User manual

The main features.


- In wall mountable remote control units for APart active speakers to facilitate the control of your speakers in your meeting-room, class room etc.
- Brushed aluminium front.
- The ACP and ACPL require no additional power supply.
- The ACP allows remote power on/off, Volume and direct muting.
- The ACPL has the same features as the ACP offers additionally a selectable microphone line input.
- The Stereo line input on the ACPL panel has increased input sensitivity and is compatible with headphone outputs of most portable music players.
- Both the ACP and ACPL have a power indicator allowing the user to visually see the power status of their APart active speakers.
- Easy mounting in most popular in-wall mounts like the APart E-MODIN.
- Connection between the ACP/ACPL and the speaker is done by a standard CAT5 cable.

Connecting the ACP or ACPL panel

1. Switch of the power of your APart active speaker
2. Connect the ACP or ACPL unit to your active speaker (through CAT5 cable max 100 meters, maximum wire length depends on multiple factors, such as cable quality and external influence from high power lines etc.)
3. Only one ACP or ACPL can be connected to each each APart active speaker pair.

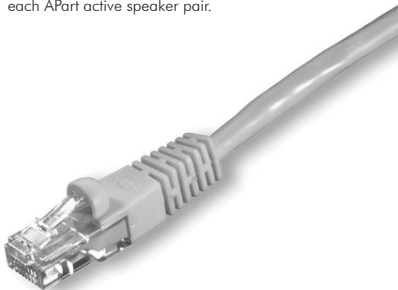


Technical data ACP

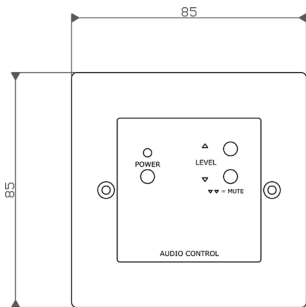

Dimensions: 85x85x28mm (h x w x d)

Weight: 70g

Technical data ACPL

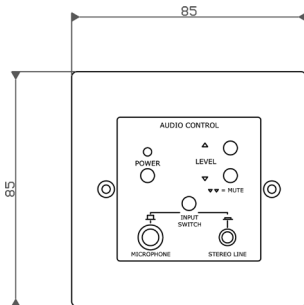

Dimensions: 85 x 85 x 28mm (h x w x d)

Weight: 90g

Input sensitivity stereo line: 500mV

Input sensitivity microphone: 7mV

Warranty information

APart-Audio warrants this product to be free of defects in material and workmanship for a period of one year for parts and for a period of one year for labor from the date of original end-user purchase. This warranty is valid only for the original enduser and cannot be transferred.

During the warranty period APart-Audio or one of its authorized service partners shall either repair or replace any product, free of charge, that proves to be defective on inspection by APart-Audio or its authorized service representative.

This warranty does not include, damages or product faults due to abuse, misuse or faulty installation.

Using the ACP & ACPL panel

After installing and connecting the ACP(L) panel to your APart active speakers, you can switch on the power switch of your APart active speakers. (use the power switch at the backside of the speaker set)

With the "Power" button (1) on your ACP(L) you can now put your active speakers in either "on" mode or "standby" mode.

With the "level" buttons (2) you can control the volume of your APart Active speakers through the ACP(L). Note that the maximum selectable volume level needs to be selected at the backside of your APart active speaker.

Double click the "level down" button (3) to mute the system.



Using the local inputs of the ACPL

Before you are able to use the inputs from the ACPL, you need to select this as a source at your APart active speakers. For example for SDQ5PIR, you can select the input through the IR remote control.

You can connect a Dynamic microphone to the ACPL by using the "microphone" jack. 6.3 mm (balanced mono input) (4)

You can connect an MP3 player to the ACPL by using the "Stereo Line" jack. 3.2 mm stereo mini-jack (unbalanced stereo input) (5)

With the button "input switch" (6) you can select the ACPL input you want to hear.

Note: The selection of the audio input is only selectable for the inputs from the panel itself. It cannot control inputs that are connected directly to your APart active speaker.

