

Cloud MPA120MK2 & MPA240MK2 Jumper Settings



Ref	Description	Options	Default	Location	Notes
J1A , J1B	Line 6 priority enable	ON / OFF	OFF	Main Board	
J2	Line 6 priority release time	3s, 6s, 12s	3s	Main Board	Remove for 12 seconds release time
J3	Mic 1 Phantom Power	ON / OFF	OFF	Main Board	
J4	Mic 2 Phantom power	ON / OFF	OFF	Main Board	
J5	Page Mic over Mic 2 defeat	ON / OFF	ON	Main Board	Set to OFF to prevent Page over Mic 2 priority
J6A, J6B, J6C	HI-Z input enable	100V / MIC	MIC	Main Board	Set to 100V to enable HI-Z input
J7A, J7B	HI-Z input as Line 5	MIC / LINE	MIC	Main Board	
J8	Mic priority over Facility Port	ON / OFF	ON	Main Board	
J9	Aux output music source	TRACK / LINE1	TRACK	Main Board	
J10	Force front panel source selection	SW / FR	SW	Main Board	
J11	Music Mute NO/NC	NO / NC	NO	Main Board	
J12	APD enable		Fitted	Main Board	Remove to enable APD feature

General Notes:

- All power to the unit must be removed before removing the top panel
- All jumpers in a set must be moved together

Cloud Electronics Limited

140 Staniforth Road, Sheffield, S9 3HF. England
 Telephone: +44 (0)114 244 7051
 Web: www.cloud.co.uk E-mail: info@cloud.co.uk

Cloud Electronics USA

1960 Sidewinder Drive, Suite 211, Park City,
 Utah 84060. United States of America.
 Tel: +1 435 640 2474
 Web: www.cloudusa.pro E-mail: sales@cloudusa.pro