

Biamp NPX Convenience Paging Stations

NPX H1040/G1040/H1100/G1100

Installation & Operation Guide



Connecting people through extraordinary audiovisual experiences™



NPX H1040/G1040



NPX H1100/G1100

NPX H1040/G1040

Paging Stations

The NPX H1040/G1040 are 4-button convenience paging stations with a handheld or gooseneck microphone for use in Tesira® and Qt® X systems. Each features embedded DSP and on-board memory to support stored message playback and customized preambles. NPX paging stations can be set up to utilize AVB or Dante® paths for paging content. The NPX H1040/G1040 store up to four user-configurable page codes and up to 10 prerecorded messages.

NPX H1100/G1100

Paging Stations

The NPX H1100/G1100 are 10-button convenience paging stations with a handheld or gooseneck microphone for use in Tesira and Qt X systems. The H1100/G1100 feature embedded DSP and on-board memory to support standard and advanced public address functionalities. NPX paging stations can be set up to utilize AVB or Dante® paths for paging content. The NPX H1100/G1100 store up to 999 user-configurable page codes and up to 10 prerecorded messages.

Setup and Use

The Tesira software provides an intuitive interface for setup and programming of the NPX paging stations. The information supplied by this manual relates to physical connections and device setup. For more details on software, please consult the [Tesira Help File](#).

NPX may be integrated into a Qt X sound masking system as an audio source in a future release. Click [here](#) for information on the web-based device and system management for the Qt X.

Installation

Each model supports both tabletop and wall mounting with a removable “foot” that allows the paging station to be mounted flat against any surface. Click [here](#) for installation details.



A: 9300 S.W. Gemini Drive Beaverton, OR 97008 USA

W: www.biamp.com

NPX HANDHELD/GOOSENECK FRONT & BACK



Figure 1: NPX G1100 Front Panel



Figure 2: NPX H1100 Front Panel

Front

1. LCD Menu Navigation Buttons

Up, Down and Select buttons allow the user to navigate the LCD menu.

2. LCD

Allows the user to view menus and functions. See [Operation](#) for more details.

3. Page Code Selection Buttons

Defines a voice-paging operation including its type, destination and priority.

4. Microphone

5. Page Status LED Indicators

Indicates if the user is in Talk/Don't Talk modes:

Status	LED Indicator
Talk Now PTT	Right LED Green Solid
Talk Now Latching	Right LED Green Pulsing
No Talk	Left LED Red Solid
Wait	Left LED Yellow Solid

6. Press-to-Talk (PTT)

Allows the user to initiate announcements while holding the PTT button is down. The page ends when the PTT button is released.

6a. Latching Button (gooseneck only)

Keeps a page active until the button is pressed again or the PTT button is pressed.

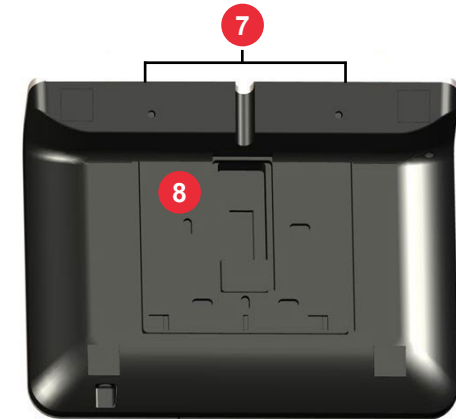


Figure 3: NPX Back Panel

Back

7. Removable Foot

The removable foot allows for flat surface and wall mounting.

8. Back Plate

The removable back plate supports wall mounting.

NOTE: Marking plate (regulatory label) located at the bottom of the unit.

PRODUCT INSTALLATION

Install away from heat sources such as vents, radiators, heat registers and stoves or near water or steam. Do not exceed the maximum ambient operating temperature of 32-104° F (0-40° C).

The two types of devices (handheld and gooseneck) may be installed in almost any location that is convenient for the room design requirements. This includes setting or attaching the device on a flat surface or to a wall. A Kensington lock can be used for added security while still allowing the NPX to be moved around.

Surface-Mount Installation

1. Determine where the NPX is to be located.
2. Remove the foot from the NPX by inserting a small Philips screwdriver or similar tool, with a maximum 3/16" (4.7mm) diameter, into the hole as shown in Figure 4.

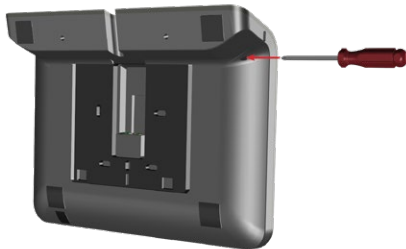


Figure 4: Foot Release

3. While pressing and holding the tool in the hole, slide the foot to the left and lift it away from the device as shown in Figure 5.

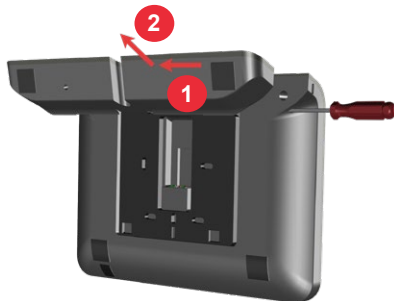


Figure 5: Foot Removal

4. Secure the foot to a flat surface. Cut a hole into the surface, below or just beyond, where the RJ-45 port at the back of the NPX will be located. Route RJ-45 up through the hole as shown in Figure 6.
5. Insert the RJ-45 into the port at the back of the NPX as shown in Figure 7.
6. Install the NPX onto the foot by pressing down and sliding to the right as shown in Figure 8.

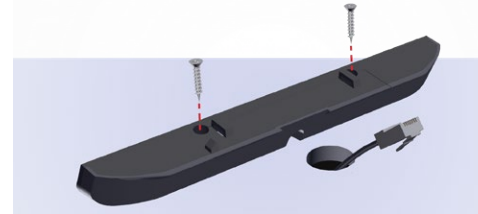


Figure 6: Foot Installation

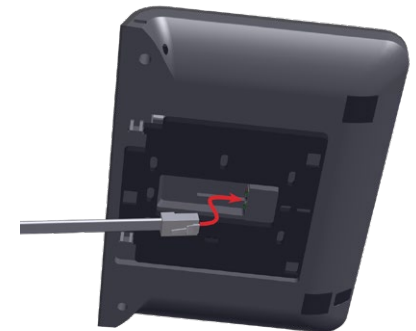


Figure 7: NPX Connection

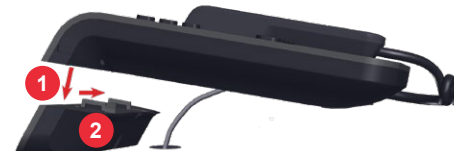


Figure 8: NPX Installation

A security slot can accommodate a Kensington® lock (not included) Figure 9.



Figure 9: Security Slot

PRODUCT INSTALLATION (CONTINUED)

Wall-Mount Installation

An optional wall-mounting bracket is clipped to the back of the NPX but must be removed and flipped for installation.

1. Determine the location where the NPX is to be located. The unit must be no higher than 6' 7" (2 m) above the floor.
2. Remove the foot from the NPX by inserting a small Philips screwdriver or similar tool (maximum 3/16" (4.7mm) diameter) into the hole as shown in Figure 8.
3. While pressing and holding the tool into the hole, slide the foot to the left and lift it away from the device as shown in Figure 10.

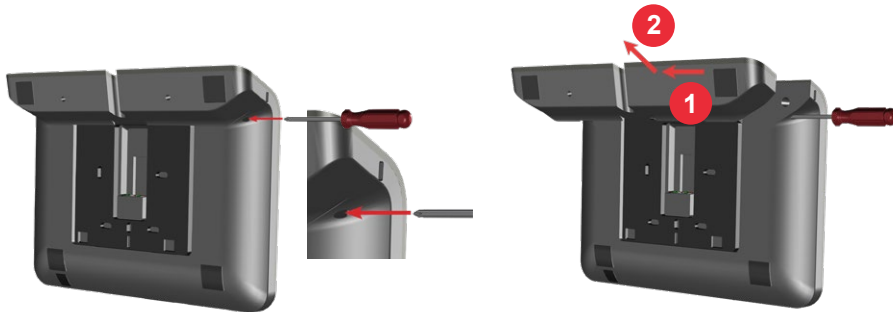


Figure 10: Foot Release

Figure 11: Foot Removal

4. Slide the back plate slightly to the left and lift it away from the device. Turn the bracket 180 degrees as shown in Figure 12.

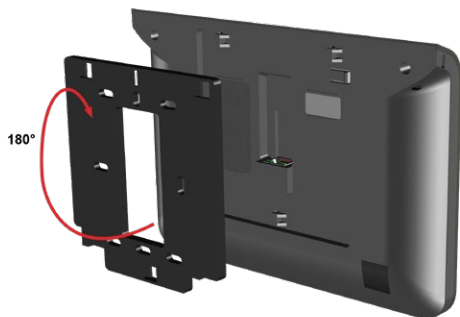


Figure 12: Back-Plate Removal

5. Attach the bracket to a single or double gang box with flat-head screws as shown in Figure 13. (screws and gang box not included).

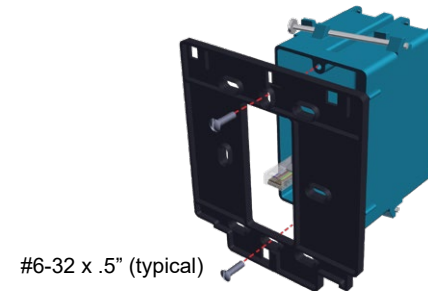


Figure 13: Back Plate Installation

6. Connect the RJ-45 to the port at the back of the NPX and attach the NPX to the back plate by placing and sliding it to the left until it clicks into place as shown in Figure 14.

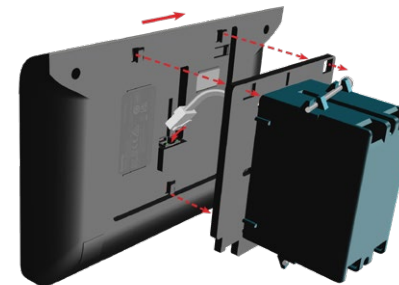



Figure 14: NPX Installation

7. Removing the NPX from the back plate is the opposite of step 6. Insert a tool into the release hole and slide the device to the right (instead of the left) and lift it off of the bracket.

OPERATION

LCD Button Navigation

Up, Down and Select navigation buttons adjacent to the LCD allow the user to navigate the system of menus for the NPX device.

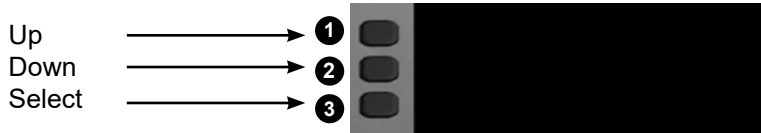


The table below shows the screens and navigation during and after powering up the NPX device:


Function	Navigation	LCD	Description
Splash Screen	• N/A		Displays when NPX device is powering on.
PIN Authentication	• N/A		Displays the PIN Authentication screen if a PIN code is required. There may be a brief delay before the next screen displays.
System Alerts	<ul style="list-style-type: none"> • Press and hold ③ and then press ② to go to Device Information. • Press and hold ③ and then press ① to go to Recordings. 		A System Alerts (Host Communication Fault) screen will appear until the NPX device is discovered and has established communication with the system it is operating with (either Tesira or Qt X). See System Alerts for information.
Page Code Screen	<ul style="list-style-type: none"> • Press ① to go to previous page code. • Press ② to go to next page code. • Press and hold ③ and then press ② to go to Device Information. • Press and hold ③ and then press ① to go to Recordings. • Press ③ to return to Page Code. 		The default Page Code screen displays after the launch of the NPX device. This screen allows the user to enter a specific page code from the keyboard or scroll through the page codes to send a live page or play a recorded message. Click here for paging details.
Device Information Screen	<ul style="list-style-type: none"> • Press and hold ③ and then press ① to go to Recordings. • Press ③ to return to Page Codes. 		Displays the Device Model, IP Address, Net Mask, Serial # and Firmware Version of the NPX.

OPERATION (CONTINUED)

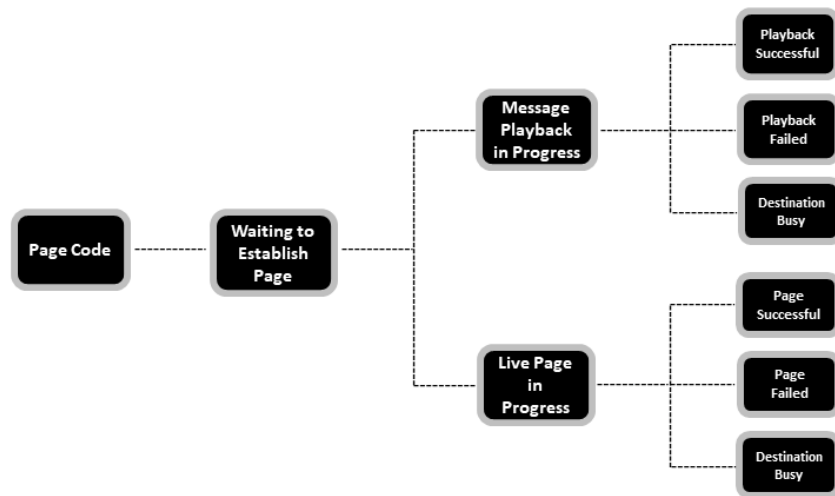


Paging and Message Playback Instructions




Make a live page

1. At the Page Code screen press the top or middle LCD buttons next to  to navigate to and highlight a specific page code. The user may also type the appropriate page code number on the keypad (10-key only).
2. Press and hold the PTT button, speak into the microphone and release the button when done. On gooseneck models the user may also tap the latching button, speak into the microphone and tap the button when done.

Target rings around the microphone icon allow the user to see when the optimal speaking level is reached:

Levels	Status
	The microphone icon displays when the user presses and holds the PTT button or taps the latching button. The green ring displays and flashes until the user speaks into the microphone.
	When the user speaks into the microphone, the outer green ring displays once the optimal speaking level is reached. The user may need to move closer to the microphone or speak louder.
	If the speaking level gets too loud the outer ring turns red. The user must move away from the microphone or speak more quietly to get to an acceptable level.

Playback a recorded message

3. At the Page Code screen press the top or middle LCD buttons next to  to navigate to and highlight a specific page code. The user may also type the appropriate page code number on the keypad (10-key only).
4. Press and hold the PTT button, speak into the microphone to record the message and release the button when done. On gooseneck models the user may also tap the latching button, speak into the microphone to record the message and tap the button when done.

Preambles

Live page and recorded message playbacks can be preceded by a preamble. The preamble plays first when the user presses and holds the PTT button or taps the latching button. The user can then make the live page or the recorded message plays back immediately after.

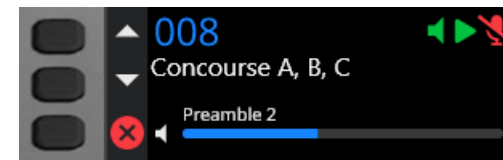


Figure 15: Preamble Playing



Figure 16: Live Page after Preamble

Page Failed

When a higher priority page code is already in progress. If any zones defined in the page zone are available (even if some zones are busy) the paging station will allow the page to the available zones.

Playback Failed







The playback failed screen displays when the user tries to playback a message with a non-existent recording.

Navigation

See the [Navigation Table](#) for LCD navigation during paging activities and [LCD Icons](#) for descriptions.



OPERATION (CONTINUED)

Paging and Message Playback LCD Button Navigation

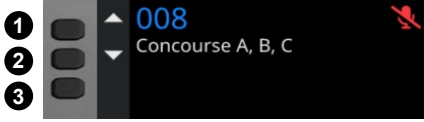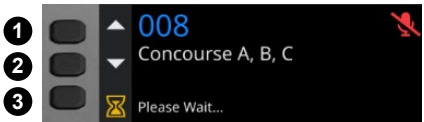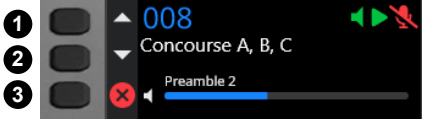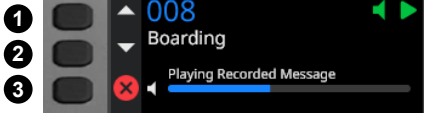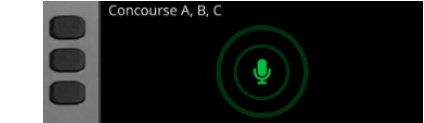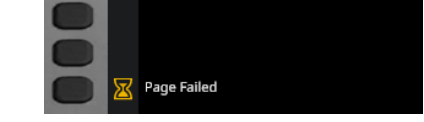Function	Navigation	LCD	Description
Select a Page Code	<ul style="list-style-type: none"> Press 1 or 2 to navigate to appropriate page code or type the page code number on the keypad (10-key only). 	 <p>The LCD shows the page code '008' in blue and 'Concourse A, B, C' below it. There are up and down arrows on the left side of the display. To the left of the LCD, three buttons are shown, labeled 1, 2, and 3.</p>	Displays the current page code and allows the user to scroll to select a page code.
Establish Message Playback	<ul style="list-style-type: none"> N/A 	 <p>The LCD shows '008' and 'Concourse A, B, C' at the top, and 'Please Wait...' with a yellow hourglass icon at the bottom. The same three buttons (1, 2, 3) are shown to the left.</p>	Displays when the unit is establishing a message playback.
Preamble in Progress	<ul style="list-style-type: none"> Press 3 to cancel preamble. 	 <p>The LCD shows '008' and 'Concourse A, B, C' at the top, and 'Preamble 2' with a blue progress bar and a red 'X' icon at the bottom. The same three buttons (1, 2, 3) are shown to the left.</p>	Displays when preamble is in progress. Note that this cancels the preamble and the following action (either live page or prerecorded message playback).
Message Playback in Progress	<ul style="list-style-type: none"> Press 3 to cancel playback. 	 <p>The LCD shows '008' and 'Boarding' at the top, and 'Playing Recorded Message' with a blue progress bar and a red 'X' icon at the bottom. The same three buttons (1, 2, 3) are shown to the left.</p>	Displays when a message playback is in progress.
Live Page in Progress	<ul style="list-style-type: none"> N/A 	 <p>The LCD shows 'Concourse A, B, C' at the top and a large green microphone icon in the center. The same three buttons (1, 2, 3) are shown to the left.</p>	Displays when a live page is in progress.
Page Failed	<ul style="list-style-type: none"> N/A 	 <p>The LCD shows 'Page Failed' with a yellow hourglass icon. The same three buttons (1, 2, 3) are shown to the left.</p>	Displays briefly when a user attempts to make a page while a higher priority page code is already in progress.



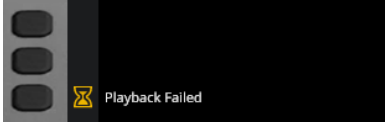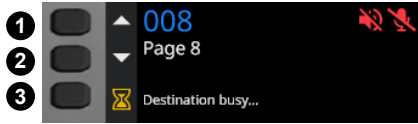


OPERATION (CONTINUED)

Paging and Message Playback LCD Button Navigation

Function	Navigation	LCD	Description
Playback Failed	<ul style="list-style-type: none"> N/A 		Displays briefly when the user tries to play back a message with a non-existent recording.
Destination Busy	<ul style="list-style-type: none"> Press 1 to go to previous page code. Press 2 to go to next page code. 		<p>Displays when at least two paging stations are connected to the same network and a message is already playing on one of them.</p> <p>-OR-</p> <p>A high priority page code interrupts the lower priority page code.</p>

Message Recording Instructions

Record a message


- From the Page Code (default) screen, press and hold the bottom LCD screen button and then press the top button to go to the Recordings screen.
- Press the top or middle LCD buttons next to  to navigate to and highlight a specific recording slot.
- Press the bottom LCD button next to  to enter the selected Message Slot screen.
- Press the top LCD button next to the record button  to go to the Record Message screen.
- Press and hold the PTT button, speak into the microphone to record the message and release the button when done. On gooseneck models the user may also tap the latching button, speak into the microphone to record the message and tap the button when done.
- Press the top LCD screen button next to  to save the recording.
- Press the middle LCD screen button next to  to delete a recording. Press Yes or No to continue.

Navigation

See the [navigation table](#) for LCD navigation during recording activities and [LCD icons](#) for descriptions.

OPERATION (CONTINUED)

Record a Message LCD Button Navigation

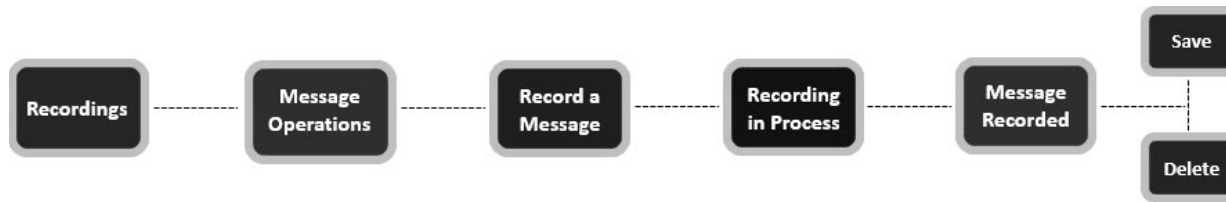














Function	Navigation	LCD	Description
Recordings Screen	<ul style="list-style-type: none"> Press 1 to go to previous recording slot. Press 2 to go to next recording slot. Press 3 to go to Page Code screen if slot is not selected. 		Displays the list of assigned and unassigned message slots.
Select Recording Slot	<ul style="list-style-type: none"> Press 3 to go to Message Operations from the selected recording slot. 		
Message Operations Screen	<ul style="list-style-type: none"> Press 1 to go to Record Message. Press 2 to go to Delete Message. Press 3 to return to Recordings. 		Displays the message slot with record or delete options.
Message Recording Screen	<ul style="list-style-type: none"> Press 3 to go to Message Operations. 		Displays when the user is about to record a message.
Recording Message Screen	<ul style="list-style-type: none"> N/A 		Displays when the message is being recorded from the microphone.
Message Recorded Screen	<ul style="list-style-type: none"> Press 1 to save message and return to Recordings. Press 2 to delete message. Press 3 to return to Recordings. 		Displays once the recording is complete.

OPERATION (CONTINUED)

LCD Icons and Fault Codes

The icons below represent the LCD functions on the NPX device to help the user to navigate the function menus:


Icon	Function
	Paging microphone is active (unmuted) - Talk now
	Paging microphone is inactive (muted)
	Recorded announcement is being played to the destination zones
	Destination zones are busy. Page will fail.
	Please wait
	Return to the home screen
	Return to message slot screen
	Display the record message screen
	Selection arrows for page codes and recordings screens (previous/next)
	Cancel preamble or recorded message playback already in progress
	Station is locked
	Delete the selected message
	Save a recent recording

System Alerts displays a list of current faults on the NPX device:


Fault Code	Description
DEVICE_TEMPERATURE	Device exceeded maximum temperature
HOST_COMMUNICATION_FAULT	Host communication fault
MESSAGE_MEMORY_FULL	Message memory full
FIRMWARE_UPDATE_FAILURE	Firmware update failure
AVB_STREAM_ERROR	AVB stream error
DANTE_STREAM_ERROR	Dante stream error
DANTE_LICENSE_ERROR	No Dante license found

OPERATION (CONTINUED)

Keypad

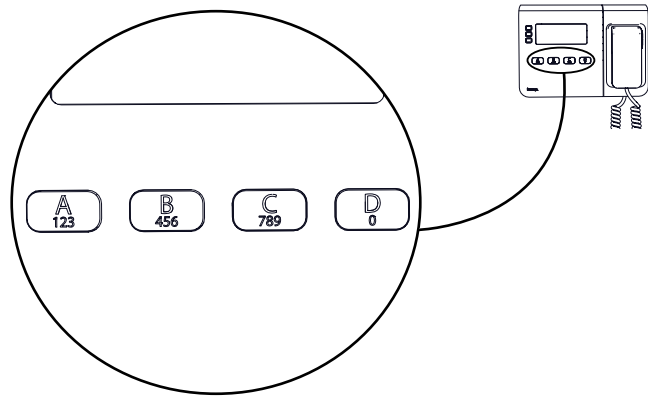

NPX H1040/G1040 4-Key Keypad

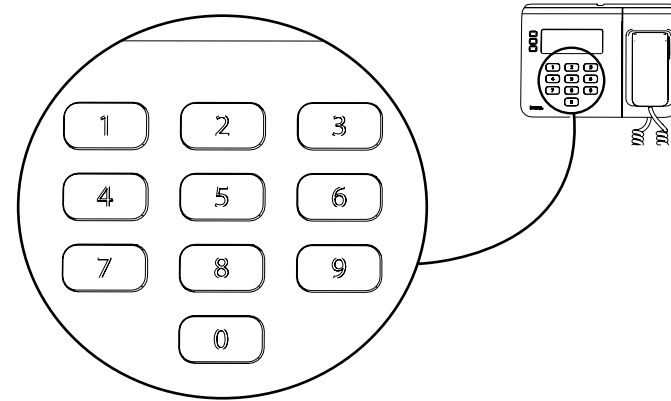

NPX H1100/G1100 10-Key Keypad

Keypad Functionality

4-Button

The 4-button station allows up to four page codes to be assigned (one for each of the four buttons A,B,C,D).

- To unlock a station that has a PIN authorization, the user must repeatedly press the same key to cycle through the numbers for that key and then stop for 1.5 seconds until the displayed number is locked in.

Button 'A' : is used to enter the number 1, 2 or 3
Button 'B' : is used to enter the number 4, 5 or 6
Button 'C' : is used to enter the number 7, 8 or 9w
Button 'D' : is used to enter the number 0

- To enter the PIN 4289 the user types the following sequence:
B, <wait>, A, A, <wait>, C, C, <wait>, C, C, C, <wait>

10-Button


The 10-button station allows up to 999 page codes to be assigned. Users can search for a page code by typing in the page code number on the keypad, or by navigating to the next/previous page code with the top two navigation buttons. A 4-digit PIN is required if the station is locked.

Page codes must be entered as 3 digits. For example, to show page code nine, the user would enter 0-0-9. For page code 20 the user would enter 0-2-0.

NPX provides 10 numbers for the 10-key and 14 letters/numbers for the 4-key functions as shown in the table below:



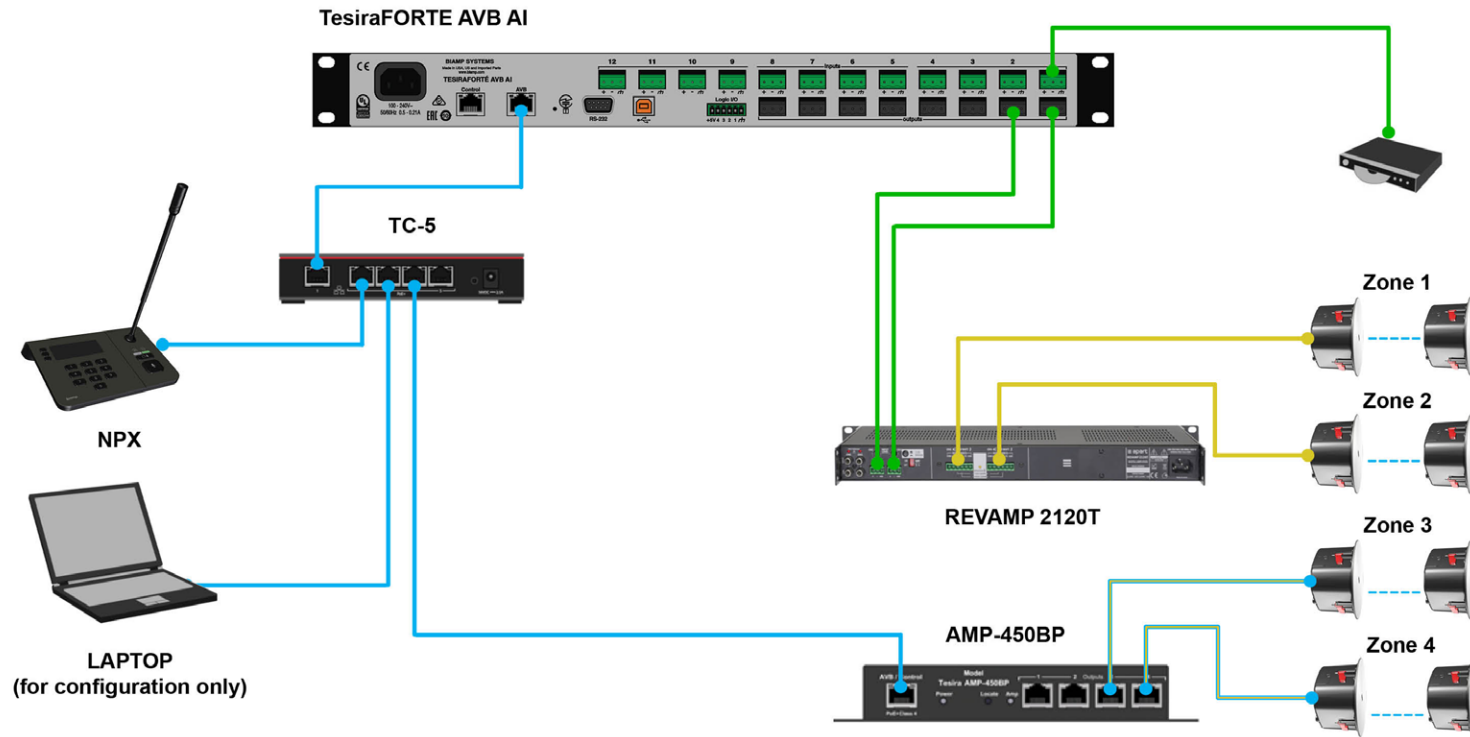

Type	Buttons	Function
10-Key Keypad	1, 2, 3, 4, 5, 6, 7, 8, 9, 0	Page Code Assignments
4-Key Keypad	A, B, C, D [1 2 3], [4 5 6], [7 8 9], [0]	Page Code Assignments (Letters) PIN Code (numbers)

NPX AVB Single Cable




NOTE: This example is the preferred solution for the NPX Paging Stations. In cases where AVB traffic and control are not allowed on the same network, see the NPX AVB Separated Networks - Dual PC Network Cards example in the manual.

Cable Type



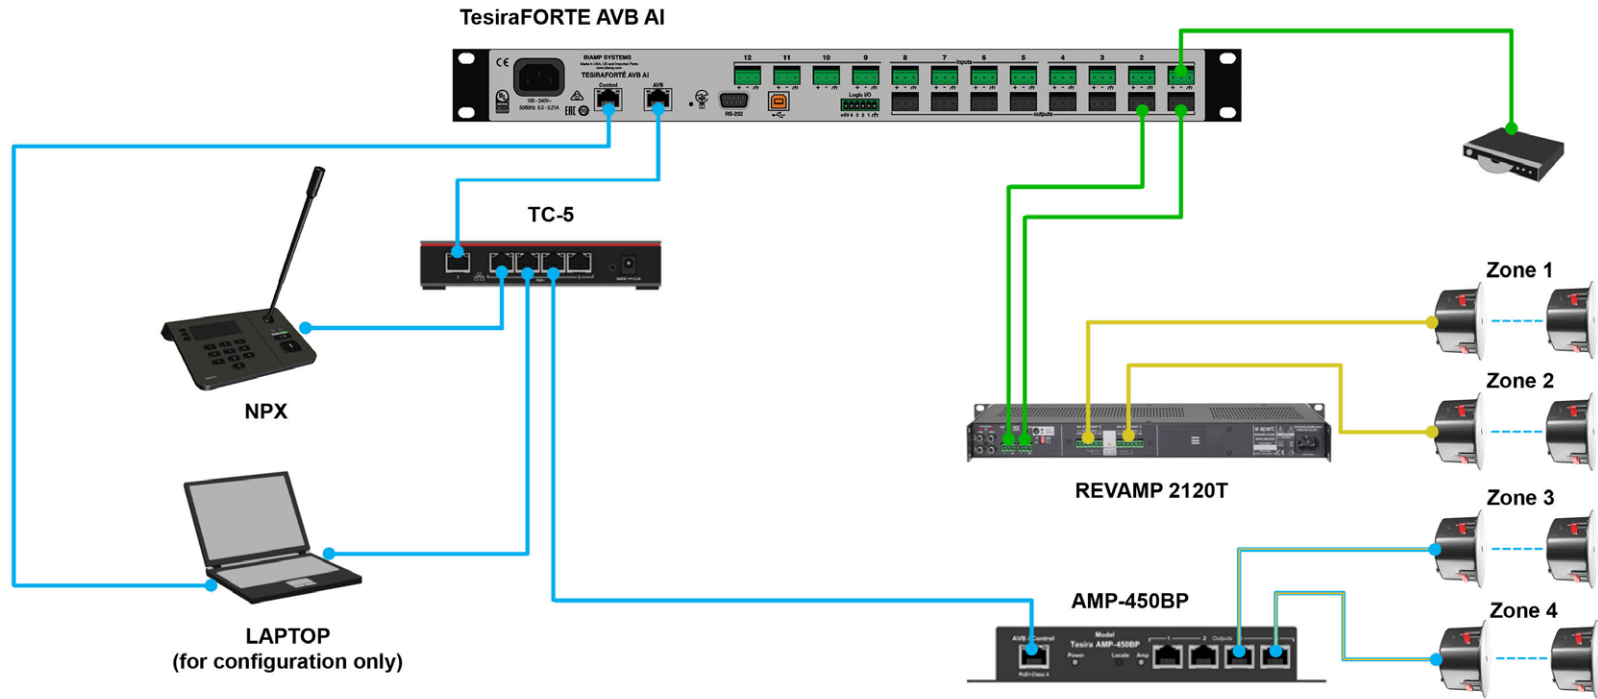

Network Cable	
Line Level Audio	
Speaker Level Audio	
Speaker Level Audio using Network Cable	

NPX AVB Separated Networks - Dual PC Network Cards




NOTE: See this [Cornerstone article](#) for information on configuring devices individually if two network cards are not available on the computer being used.




Cable Type

Network Cable	
Line Level Audio	
Speaker Level Audio	
Speaker Level Audio using Network Cable	

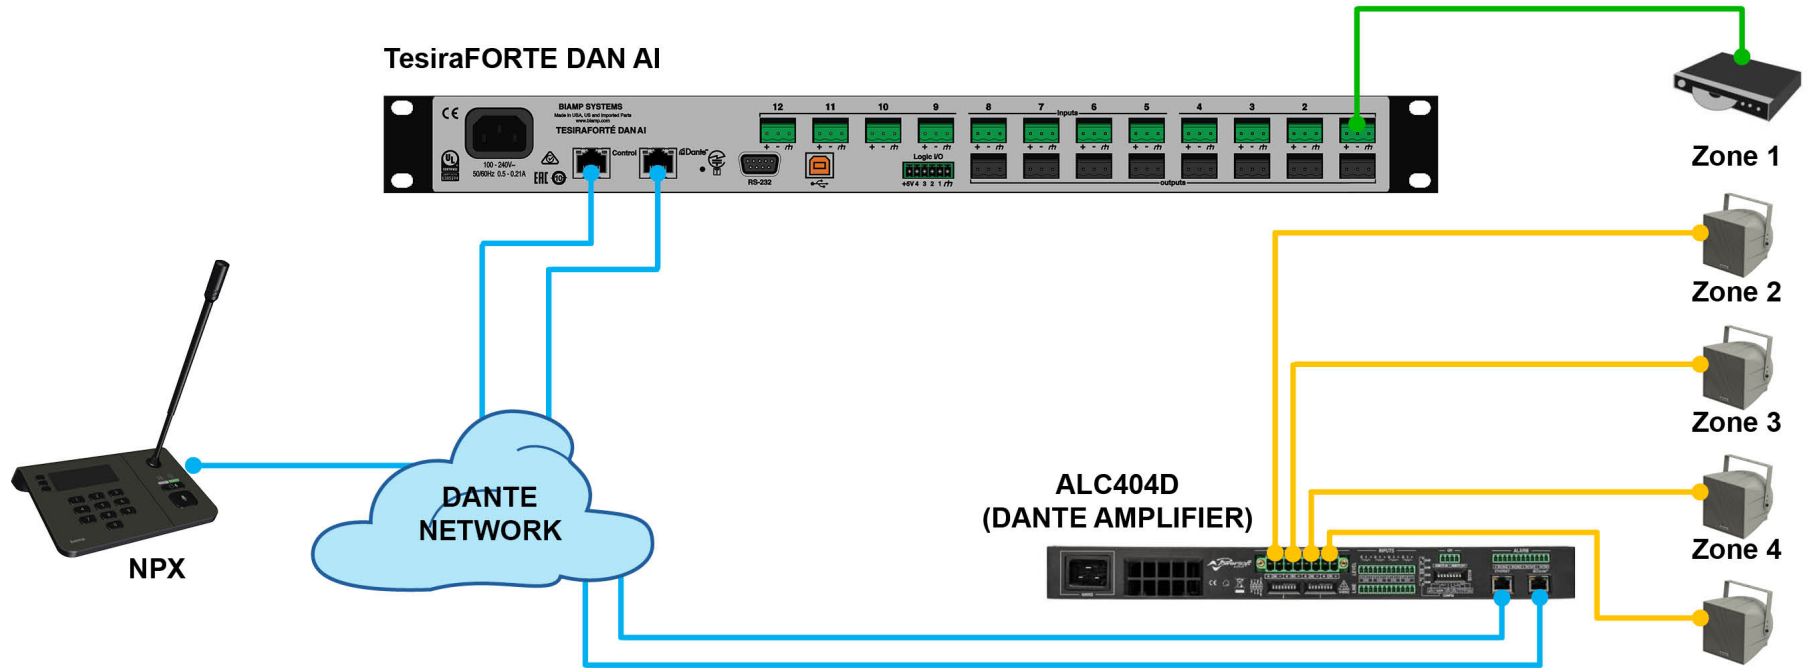NPX with Dante



Cable Type

Network Cable	
Line Level Audio	
Speaker Level Audio	



CONTACT US

Email

support@biamp.com

Web

support.biamp.com

Warranty

www.biamp.com/legal/warranty-information

Safety and Compliance

www.biamp.com/compliance

Dante® is a registered trademark of Audinate



A: 9300 S.W. Gemini Drive Beaverton, OR 97008 USA

W: www.biamp.com

DEC 2021