

# Cloud Z4<sub>MK4</sub> & Z8<sub>MK4</sub> Jumper Settings



Ref	Description	Default	Location	Notes
J1	Remote source selection	SW	Rear top: Zone PCB	on MK3 onwards
J2	Line 6 priority	OFF	Front top: Zone PCB	on MK3 onwards
J3	Line 6 priority release time	3s	Front top: Zone PCB	on MK3 onwards
J4	Mic over facility input priority	OFF	Rear top: Zone PCB	on MK3 onwards
J5	Paging mic priority trigger	VOX	Rear top: Zone PCB	on MK3 onwards
J6	Mics 1 and 2 over music priority	ON	Front top: Zone PCB	Not available on some older units (Mk2 or earlier)
J7	Facility input noise gate enable.	EN	Front top: Zone PCB	on MK3 onwards
J8	Page mic over mic priority in Music Mute	EN	Rear top: Zone PCB	on MK3 onwards
<b>Lower PCB - MK4 ONWARDS</b>				
SW1	Music Mute NO or NC	NO	Rear left: Lower PCB	1 WAY DIP Switch
SW2	Digital Page Mic Termination/Offset	ON, +0	Front left: Lower PCB	3 WAY DIP Switch
SW3	Microphone 1-3 Phantom Power	OFF	Rear right: Lower PCB	3 WAY DIP Switch
<b>LOWER PCB - MK3 AND OLDER</b>				
J1	Mic 1 phantom power	OFF	Rear right: Lower PCB	Jumper (MK3 and older)
J2	Mic 2 phantom power	OFF	Rear right: Lower PCB	Jumper (MK3 and older)
J3	Paging mic phantom power	OFF	Rear centre: Lower PCB	Jumper (MK3 and older)
J4	Music Mute NO or NC	NO	Centre left: Lower PCB	Jumper (MK3 and older)

**General Notes:**

- All power to the unit must be removed before removing the top panel
- Z4mk4/Z8mk4 is split into 1 lower pcb and a zone pcb for each zone. Jumpers on the Zone PCB only affect that zone.
- Z4mk4/Z8mk4 has facility port connections for every zone to support the LM-2 active remote panel.

**Cloud Electronics Limited**

140 Staniforth Road, Sheffield, S9 3HF. England  
 Telephone: +44 (0)114 244 7051 Fax: +44 (0)114 242 5462  
 Web: www.cloud.co.uk E-mail: info@cloud.co.uk

**Cloud Electronics USA**

2065 Sidewinder Drive, Suite 200, Park City, Utah 84060. United States of America.  
 Toll Free: 0855 810 0161  
 Web: www.cloudusa.pro E-mail: sales@cloudusa.pro