


## BPAK (Backpack Clip Kit)

### Installation Guide

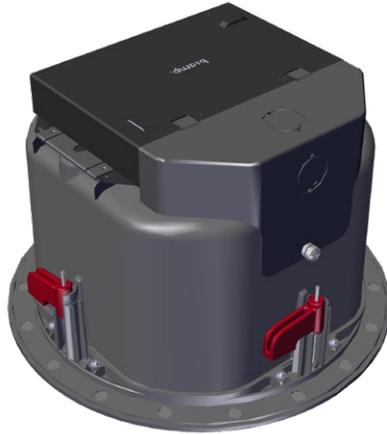

C-IC6 with Tesira unit  
secured with backpack  
clips and conduit cover

---

## PRODUCT DESCRIPTION

The BPAK Backpack Clip Kit allows a Tesira AMP-450BP, AMP-450P, TCM-X or TCM-XA to be attached to the top of a Desono C-IC6 back can.

### Kit Contents



Cover  
(for conduit usage)



Clips and M3 screws  
(2 each)




C-IC6




Tesira Unit  
(AMP-450BP shown)

# INSTALLATION

## 1. Attach clips

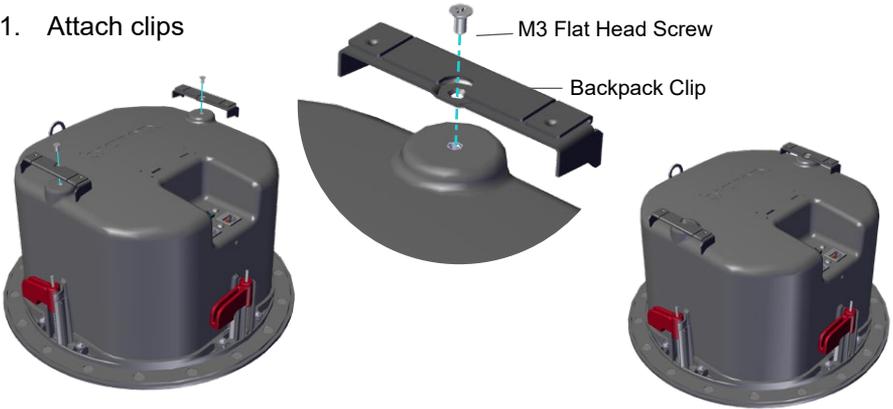

## 2. Fully slide unit into clips

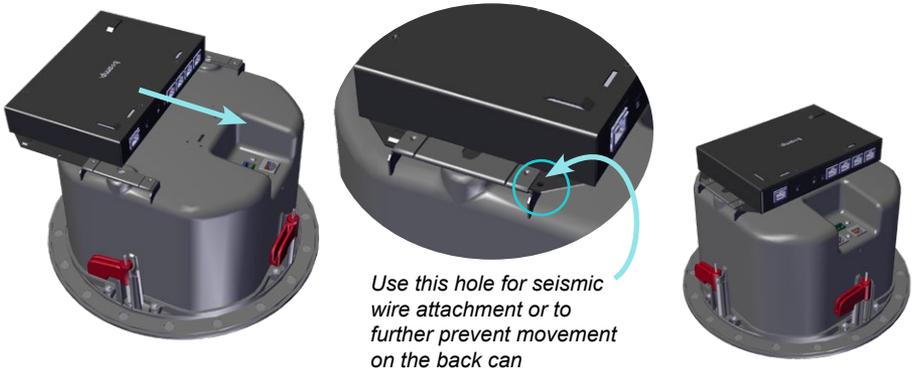

3. A cover is provided for conduit usage. Punch out and feed wiring through the opening, and connect per the device instructions. Insert tabs into the slots on the Tesira unit and tighten the thumb screw to secure the cover to the C-IC6 enclosure.

