



# **AIRMATE-USB**

# **MANUAL**

V 2.18 smd

(bluetooth)

Dear Customer,

Thank you for choosing the D&R AIRMATE-8-USB or AIRMATE-12-USB version mixer.

The AIRMATE-USB was designed by Radio Broadcast professionals along with the D&R design team and is intended to be used 24 hours per day as an "On-Air" mixer and/or a production console in the most demanding production room.

We are confident that you will be using the AIRMATE-USB for many years to come, and wish you much success.

We value suggestions from our clients and would be grateful if you could email us with your comments at [sales@d-r.nl](mailto:sales@d-r.nl) when you are familiar with the AIRMATE-USB mixer.

We learn from the ideas and suggestions of customers like you and appreciate your time.

This manual applies to both versions of the AIRMATE-USB

With kind regards,

Duco de Rijk

md



## 1. INTRODUCTION

---

### The AIRMATE-USB has Four types of modules to choose from

---

**Triple Input Modules** (positions 1-4/8) have the following features

- Professional low noise balanced Mic pre-amp with 48 volt phantom powering.
- Two pairs of line inputs with optional R.I.A.A. equalized pre-amp on line-B for turntables.
- Gain control
- Three band stereo equalizer
- Start (ON) switch
- Stereo CUE switch for pre fade listening
- 100mm smooth professional faders

**Input modules 5&6/9&10** are identical to triple input modules 1 thru 4/8 except for the line-B inputs have been converted into digital USB input and output to allow easy interface with PC's (Windows & Macintosh computers). This feature will allow you to connect to the Internet via your computer for "Live" streaming of audio to the Internet.

**Input modules 7 & 8/11&12** have a high quality built-in Telephone Hybrid in each module which are switch-able to stereo line inputs when only one or no Telephone Hybrid is needed in your live broadcast studio. There is a choice out of Telco modules, VoIP modules and Bluetooth modules or any combination of these modules.

## 2. TRIPLE INPUT MODULES 1-4/8

---

The input modules switches & controls have the following functions:

Each of Modules 1 thru 4/8 has three selectable inputs. The three types of inputs consist of a Mic input and two pairs of stereo line inputs. In the Mic switch position, the module is a normal mono module. When the Mic is switched out, you have the choice of Line A or B stereo inputs which allows for the module to become a stereo module with both left & right signals to feed the stereo mix buss.

### **GAIN**


With the gain control, the source input level can be adjusted to the required internal mixer level. This control adjusts both the Mic input and the two pairs of line inputs with the same control depending on the switch positions. Mic gain can be increased by 20dB by internal jumper settings (if needed).

### **STEREO LINE (A B)**

The stereo line inputs (A or B) pairs are high impedance inputs for connecting the stereo line level outputs of devices such as CD players.

### **MIC**

The Mic input has a balanced XLR input connector with 48volt phantom powering for condenser mikes. The Mic-pre circuitry uses the latest technology studio-class components. The low-noise design and excellent phase spec that D&R is known for is integrated throughout the AIRMATE-USB.

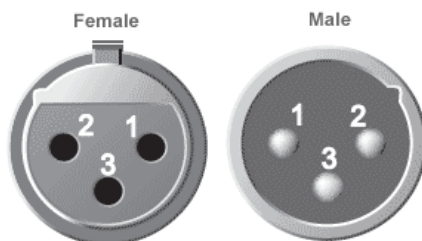

[www.audio-pluggen.nl](http://www.audio-pluggen.nl)

Using balanced microphones & cables allows for the quietest and high quality audio signals throughout your Airmate-USB mixer. You can use standard balanced Mic cables available at any pro audio dealer or music store.

The Airmate uses chassis-mount female XLR type Mic input connectors. Any standard pro audio Mic cable will have the mating male XLR connector.

### **EQUALIZER**

Each module has a stereo three band equalizer to control the high, mid, and low frequencies individually. The D&R designers used carefully chosen frequencies in the equalizer circuitry to enhance the Mic input as well as the stereo A & B line inputs.

### **AUX SEND**

The next control is a stereo Aux send that sends stereo source signals to the stereo Aux send buss Master and then to the output connectors on the Master back panel. The stereo Aux send is for external effects such as reverb, echo, or headphone amplifiers. Each Aux send can be set pre or post fader by changing jumper settings on the circuit board of each module. The factory default is post fader.

**CUE**

Below the AUX SEND is the stereo CUE switch (Pre Fade Listening), this switch allows you to check the signal before you raise your channel fader up and mix it with other signals in the mixer.

**ON**

The ON switch is used to activate the module and generate a start signal for turntables, CD players, and jingle or cart machines. This switch sends out a momentary pulse or shortens continuously two pins of the Start connector on the back panel of the console.

**FADER**

Final control is the high quality, 100mm long throw K-Alps stereo channel fader with integrated fader start switch. At the beginning of the fader movement you will feel integrated start switch that is activated when you bring up the fader. This switch activates the start circuitry that is connected to the Start Connector on the module back panel as described above. A Red light is activated if the SELF OP switch in the master section is activated. Control Room monitoring will be muted when a Mic is opened (DJ setting).

**INPUT CONNECTORS**

On the back of modules 1 thru 4/8, you find seven connectors for each module.

The **Mic input** is a balanced female XLR type connector. The two pairs of stereo line inputs use Cinch pro RCA female type connectors. If you use turn tables and need phono type R.I.A.A. equalized pre-amps, D&R offers an optional plug-in R.I.A.A. pre-amp for Line inputs B at a nominal price. The level can be set with the gain control to match any available phono cartridge.

Both **Line inputs** A & B are identical with the exception of the optional phono pre-amp. Being un-balanced, the shield and (-) or common need to be connected together during installation.

In order to use the **START** switch, it requires two pins in the 1/4" stereo connector located on the back panel to be wired. The tip and ring are shorted (continuesly or momentary by jumper selection) when the ON switch or fader switch is activated. Once you have done this, you can start a turntable with the ON switch (if the START connector is wired on the back panel).

**\*NEVER CONNECT AC POWER VOLTAGE TO THIS REMOTE-JACK\***

The **START** jack switches "quick start turntables" through the remote jack via a shorted contact action in the 1/4" stereo connector on the back of the mixer. If your turntable only needs a pulse to start, ask your dealer to modify the internal circuitry to change it into a momentary action, so it can be used as a pulse start switch. This done on jumper J17

It is also possible to use this START jack for local ON-AIR signaling, you need to change jumper setting J11


**Connections on the START connector can only be made with a maximum of 24 Volts 50 mA. Please contact your dealer if you are uncertain.**

**\*NEVER CONNECT AC POWER VOLTAGE TO THIS REMOTE-JACK\***

**INSERT**

This ring/tip/sleeve stereo jack socket let's you insert signal processors such as compressors/gates or special voice processing units to "improve" your voice to be the ultimate announcer/DJ sound. The Ring of the stereo jack sends the channel signal and the Tip accepts the return signal.

On the next page you see the type of cable you need.

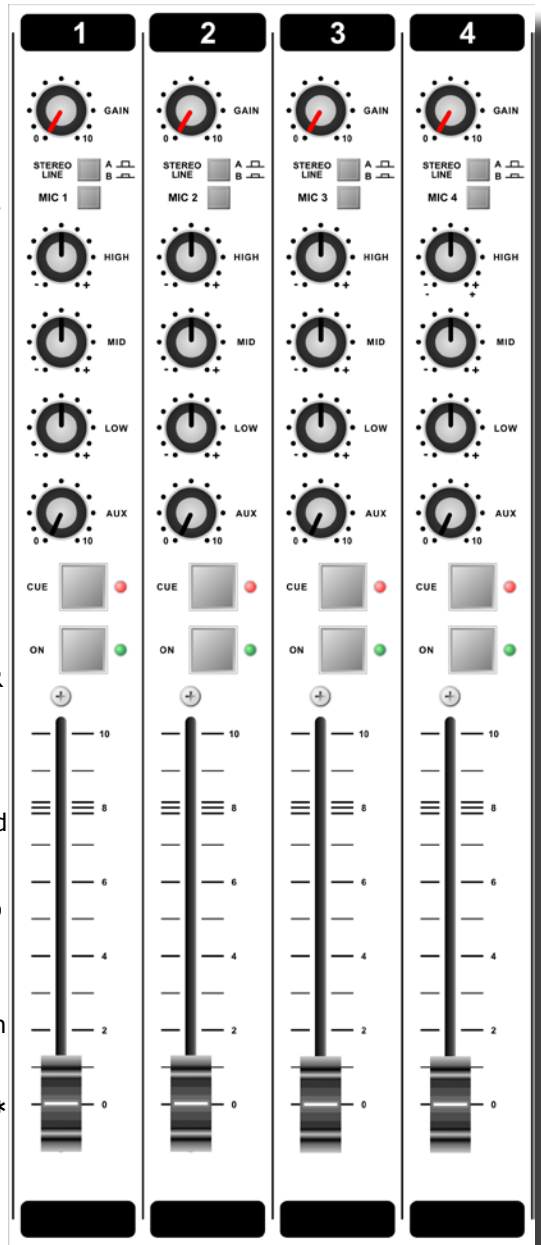




If you are going to make a cable yourselves, do it like this.  
 Connect the tip from the stereo cable to the tip of one of the mono jacks and the ring of the stereo cable to the tip of the other mono jack.

Now insert the stereo jack into the Airmate's insert and connect the mono jack that produces a hum when the tip is touched by your finger (and the related channel fader is open) into the processor's output. The other mono jack should be inserted into the processor's input.

In case your processor has XLR inputs connect the tip of the stereo jack to pin 2 of the Female XLR and short pin 1 and 3 with each other and connect to ground (sleeve)  
 This also goes for the other Male XLR, connect the ring of the stereo jack (which sends signals) to a male XLR pin 2. Short here pin 1 and 3 and tie to ground (sleeve). This has to be done because the insert is not balanced.  
 See below the cable you need.

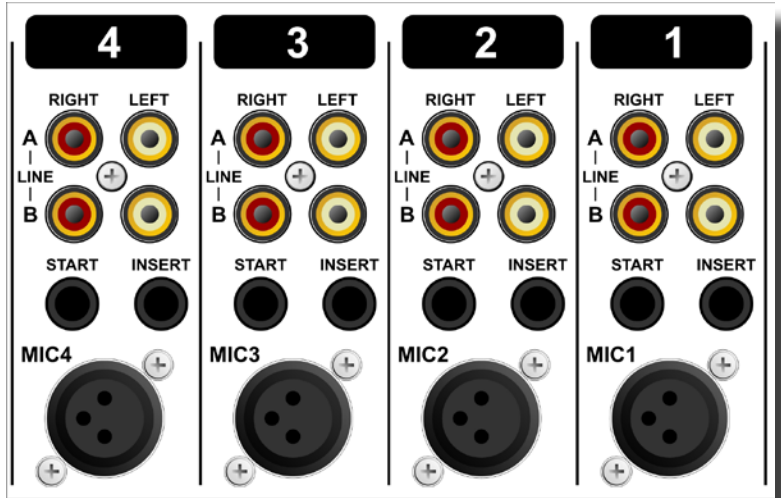

## **SPECIAL OPTIONS FOR MODULES 1 - 4/8**

Located on the input channel circuit boards are several jumpers that can be changed to enable different configurations of the channel settings. If changes are required, we advise you to contact your local dealer to have these changes performed.

The following 7 jumper settings can be changed to adjust the Airmate-USB to your needs.

	JUMPERS	DEFAULT	DESCRIPTION
1	J12-13	RIAA NO	Optional R.I.A.A. correction amp PCB can be inserted on Jumper J12 and J13. Underneath the small pcb you look at.
2	J3	Low cut ON	Low cut filter on Mic input done by shorting all 4 pins on Jumper J3.9
3	J15	Phantom ON	48 volt phantom power on/off via Jumper J15.
4	J6/16	POST	Stereo Aux send pre or post selectable via Jumper J6/16
5	J7	Channel 7-8 ON	Clean-Feed (CLN-FEED) jumper (J7) to select whether the stereo audio signal(summed to mono) is sent to the clean-feed bus that is available in the master section for connecting external Hybrids.
6	J17	Continuously	Pulse/Continuously Jumper J17 to change the start pulse from latching (continuously) to pulse.
7	J5	20dB	Mic gain ( Jumper J5) can be set to change the Mic pre from 20dB to 40dB of gain.
8	J10	MIC ON with Line input (OFF)	This jumper enables you to mute the control room monitor when the line input is selected. (in case a mic processor is connected to the line input)
9	J11	FDR Start with Mic input ( <b>OFF</b> )	You can use the START jack to individually switch on an ON-AIR light that shows that this channel MIC is active. The main ON-AIR jack in the master section will also be activated. Reposition Jumper J11 from off to ON



### 3. USB-LINE MODULES 5/9 AND 6/10 CONNECTORS, CONTROLS, & FUNCTIONS

- \* **Low noise balanced Mic pre-amp with 48 volt phantom powering.**
- \* **One pair stereo line inputs (left & right)**
- \* **One USB connector (stereo in & out)**
- \* **Gain control**
- \* **Three band equalizer**
- \* **Stereo CUE switch for pre fade listening**
- \* **Start (ON) switch**
- \* **100mm Ultra-Smooth Professional fader.**

Input modules 5/9 & 6/10 are identical to triple input modules 1 thru 4/8 except for line-B input is replaced with a USB (stereo input and output circuit) connector on the back panel.

#### **GAIN**

With the gain control, the source level is adjusted to the required internal mixer level.

This is for both Mic/Line inputs as well as the USB inputs.

#### **LINE - USB**

The stereo line input is a high impedance input for connecting any stereo line level device such as CD players, iPods, tape decks etc. The USB switch changes the module into a USB in and out module. The USB connector will communicate with play-record devices such as computers using a DAW (Digital Audio Workstation), Windows Media Player, and/or CD players using a USB output connector. It is an input that can be connected to any standard USB connector on PC's to make an easy interface with music programs running on the PC. When the USB connection is made between the Airmate-USB and your PC, your computer will recognize the USB device as new hardware. A small green led lights when data is sent over the USB cable.

In Windows Media Player, you can change settings to allow it to work as a player or recorder.

**The controls of the input modules have the following functions.**

#### **MIC**

The Mic input is a professional balanced input circuit with 48volt phantom powering for condenser mikes which delivers studio-class microphone quality to your announcer/DJ channel.

#### **EQUALIZER**

Each input module has a three band equalizer to control the high, mid, and low frequencies individually at carefully chosen frequencies.

#### **AUX SEND**


Below the Equalizer is the stereo Aux send control that can send mono Mic or stereo source signals (pre or post fader via PCB jumper settings) to the stereo Aux Send buss. The factory default is post fader.

#### **CUE**

Below the Aux send is the stereo CUE switch (Pre Fader Listening), this switch allows you to check the signal before you mix it with the other signals in the Airmate-USB.

#### **ON**

The **ON** switch is used to make a connection that can start turntables and CD players as well as jingle or cart machines. This switch sends out a momentary pulse or switches continuously inside the Start connector on the module back plate at the rear of the mixer. See "Start switch" on page 4.

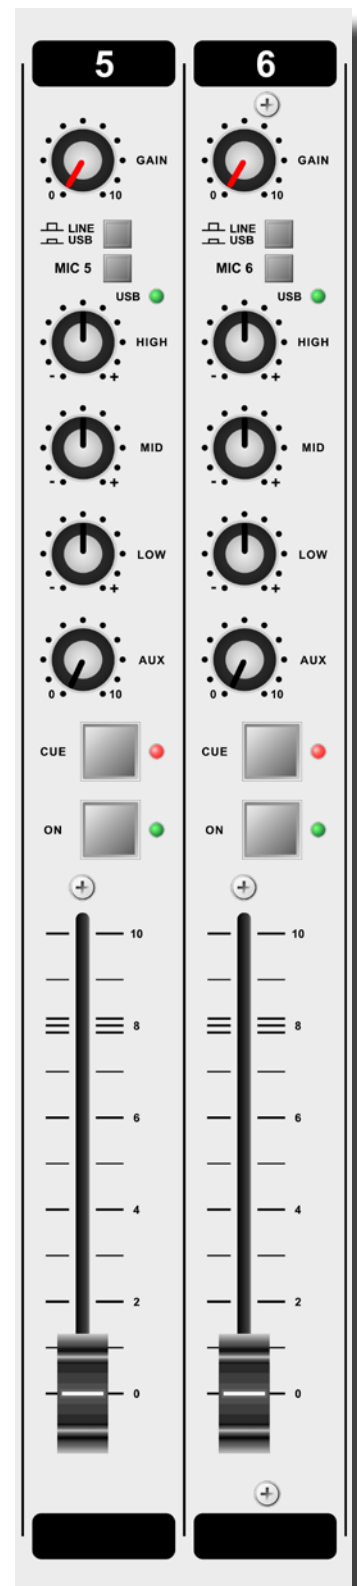

## **FADER**

Final control of the channel is the 100mm long throw K-Alps stereo channel fader with integrated fader start switch. The channel fader sends the amount of signal from the associated channel to the master mix buss. At the beginning of the fader movement you will feel an internally built in start switch that is activated when you bring up the fader. This switch activates the start circuitry and controls externally connected devices such as CD players etc (via the Start connector on the back).

## **INPUT CONNECTORS**

On the back of your AIRMATE-USB modules 5/9 and 6/10 you will find the following five connectors.

**Two unbalanced line input RCA Cinch connectors** (stereo input) for connecting CD players or any play-back devices such as cart machines, cassette players, or iPods. Any line level equipment can be connected here. The level can be set using the gain control to match most source levels.

The left RCA Cinch connector is the left input and the right RCA Cinch connector is the right input. The shield is to be connected to the ground or case of the RCA Cinch connector.

**The USB connector** is wired according to International standards and is a stereo USB 2 Codec (HID Interface) digital input, as well as an output.

**The START switch** has two active connections to be wired. The tip and ring are shorted when the ON switch or fader switch is activated. Once you have done this, you can start a turntable or other device with the ON switch via the START connector on the back panel.

The **START** switches quick start turntables through the remote jack by a continuous contact action at the back of the mixer. If your turntable only needs a pulse to start, ask your dealer to modify the internal circuitry to change it to a momentary action, so it can be used as a pulse start switch.

### ***\*NEVER CONNECT THE MAINS TO THIS REMOTE-JACK\****

*Connections on the START connector can only be made with a maximum of 24 Volts by 50 mA. Please contact your dealer in case of doubt.*

The **balanced Mic input** is on XLR and can provide 48volt phantom powering.

## **SPECIAL AVAILABLE OPTIONS IN YOUR AIRMATE-USB MODULE**


On the input PCB of your AIRMATE-USB module there are several jumpers that can be changed to enable different configurations of the channel settings. This should be done by a D&R dealer or service center.

**The following 8 jumper settings can be changed to adjust the Airmate-USB to fit your needs.**

1	J12-13	R.I.A.A. correction amp PCB can be inserted on Jumper J12 and J13.
2	J3	Low cut filter on Mic input only By shorting all 4 pins on Jumper J3.
3	J1	48 volt phantom power via Jumper J15.
4	J6/16	Stereo Aux send pre or post selectable via Jumper J6/16 (post is default).
5	J7	Clean-Feed (CLN-FEED) jumper (J7) to select whether the audio stereo signal (summed to mono) is send to the clean-feed bus that is available in the master section for external Hybrids.
6	J17	Pulse/continuous Jumper J17 to change the start pulse from latching (continuously) to pulse.
7	J5	Mic gain ( Jumper J5) can be set to amplify an extra 20dB or 40dB.
8	J28-32	USB output selection to select pre-or post master fader.



#### 4. SETTING UP THE USB MODULES

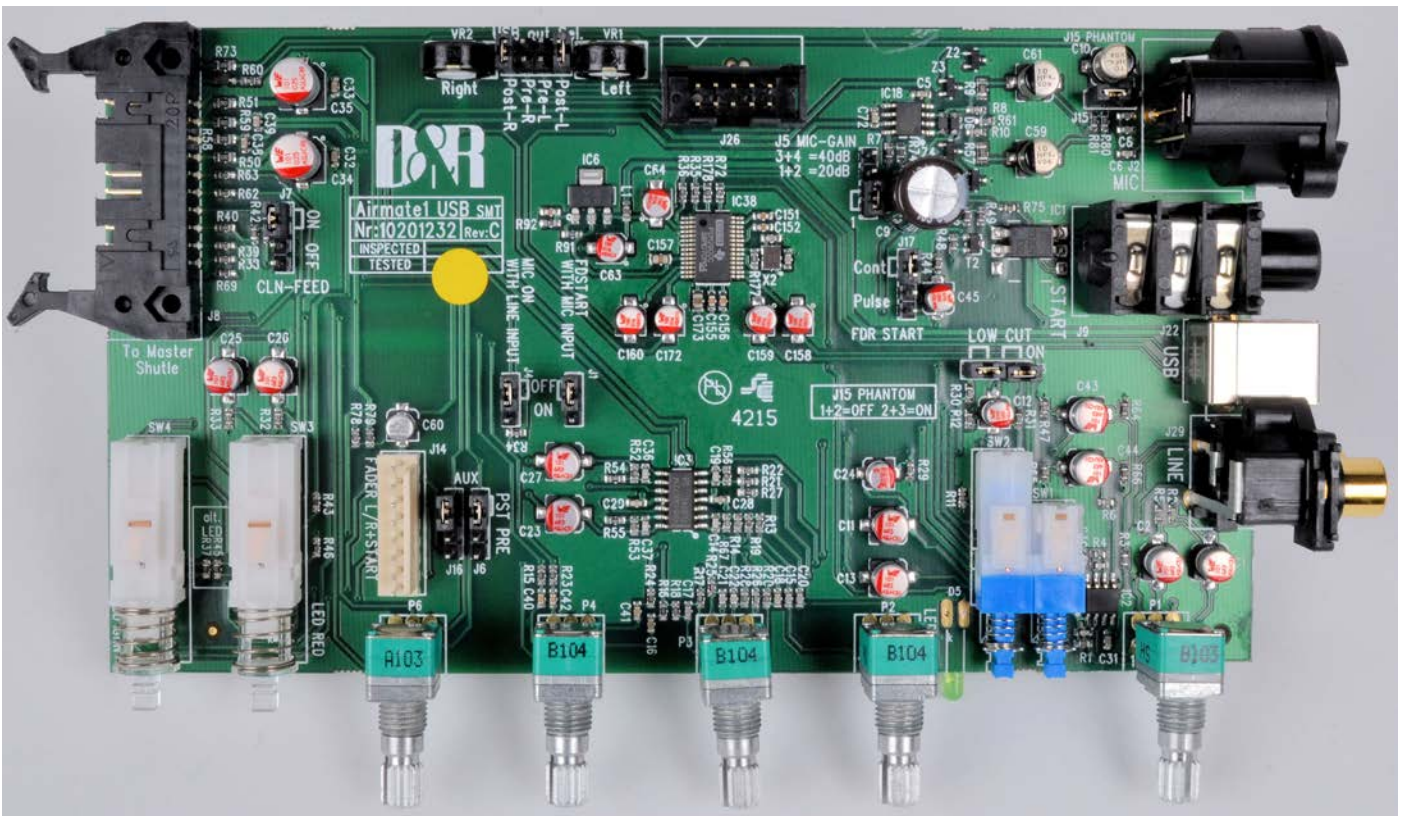

Above pictured you see a section of the USB pcb where you can decide which output signal is sent to the USB connector.

The default setting is a post master stereo fader signal that is sent to the USB connector. You can change this by moving both yellow jumpers to the mid positions, now you have a pre-fader signal going to your PC. A mix is also possible of course. The level is set by the master faders of the mixer when post is selected. But you also have left and right of the jumper settings two trimmers (VR1 and VR2) that adjust the level that is sent to the USB chip in the Airmate and thus adjust the outgoing level to your PC for left and right signal pre or post master faders.

This is especially important for Windows 7 that recognizes the Airmate-USB chips we use as mic level signals.

A lower output level coming from the Airmate-USB will greatly improve performance.


Also imbalances between left and right could be corrected by these trimmers.

An audio application needs to run on your PC to be able to see the levels. Or else trial and error is the only way.

A free downloadable tool is to be found here <https://www.darkwooddesigns.co.uk/pc2/testgen.html>

To be able to adjust this level you need to remove the bottom plate of the Airmate to access the trimmers.

The return signal coming from the PC is fixed but can be adjusted with the Gain control of the Airmate-USB channel.

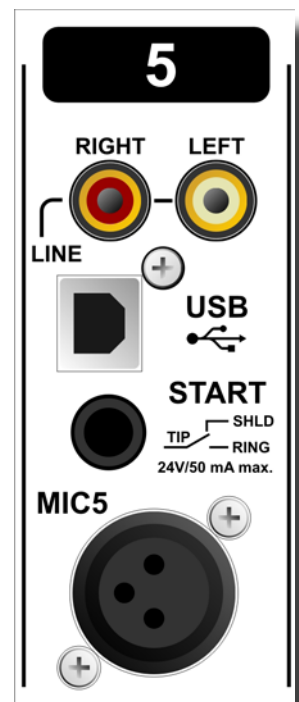

## 5. SETTING UP THE USB MODULES

---

Previous discussions about modules 1 thru 4/8 is also applicable for modules 5/9 and 6/10 except in these modules line B is replaced by a USB interface circuit and connector.

In order to set up a connection between your computer and AIRMATE-USB mixer, use a standard USB cable from any local computer shop. (See picture).



### Standard USB cable

When connecting the Airmate-USB to your computer, the computer (PC or Mac) will recognize the Airmate as new hardware and will establish a connection to any audio programs needing audio hardware.

After establishing a connection, there is no need to download drivers or performing complicated setup routines, just plug in the USB cable to your Windows or Mac computer and start tracking!

If you want to know more about USB try this link

[https://en.wikipedia.org/wiki/Audio\\_Stream\\_Input/Output](https://en.wikipedia.org/wiki/Audio_Stream_Input/Output)

If you are already familiar with digital audio recording, the latest versions of Kristal Audio Engine and Audacity are available free of charge via the Internet. Use this link <https://www.asio4all.org/> for third party downloads.

## 6. UNDERSTANDING INTERNET RADIO

---

One of the key features of the AIRMATE-USB is you can set up your own Internet radio station from your home or office and have your friends listen to your broadcasts, be it music, Talk, political, or religious programming.

For more information on the Internet, follow the web links below.

**NOTE:** D&R does not accept responsibility for the content of the following links or sites.

How it works : <https://www.shoutcast.com/>  
Winamp : <https://www.winamp.com/>  
Shoutcast server : <https://www.shoutcast.com/>

The following paragraphs concerning the Internet might give you a better understanding about Internet radio.

If you wish to set up a broadcast and you are a do-it-yourself kind of person - you might do well creating your own online radio station by using your own personal computer to create a dedicated server for doing the job.

Some of the software options for getting this done include:

### SHOUTcast:

SHOUTcast is one of the original free Internet radio software solutions for streaming audio. You can start your own station fairly easily and the software is free to download.

<https://realnetworks.com/realplayer-page>

### Helix Server Basic

Free streaming media server software which can distribute live and on-demand video and other media. Realnetworks.com describes it as: "Simple 5-stream server. This free media server is a great solution if you are getting started with streaming media and want to experiment before rolling it out to a large audience." The Helix Server Basic is free to download. <https://realnetworks.com/realplayer-page>

### Quicktime Streaming Server

Apple.com says: "Whether you are looking to add streaming media to your web site, deliver distance learning or provide rich content for your mobile subscribers, Mac OS X Server has all of the tools you need. QuickTime Streaming Server lets you deliver live or prerecorded content in real time over the Internet." You can find out more at apple.com. <https://www.apple.com/>

### Quicktime Broadcaster

Apple.com writes: "Combining the power of QuickTime with Apple's ease of use, QuickTime Broadcaster allows just about anyone to produce a live broadcast event." Download this software from apple.com <http://www.apple.com>

### Peercast

Peercast.org is a non-profit website that provides free peer-to-peer broadcasting software. "PeerCast is a simple, free way to listen to radio and watch video on the Internet. It uses P2P technology to let anyone become a broadcaster without the costs of traditional streaming," according to the peercast.org website. <http://peercast.sourceforge.net/>

### Icecast

Icecast is "free server software for streaming multimedia." Download a copy from icecast.org. <https://www.icecast.org/>



## 7. TELCO-LINE MODULE 7/11 and 8/12 CONNECTORS, CONTROLS, & FUNCTIONS

Input modules 7/11 & 8/12 have integrated Hybrid circuitry with built in high quality Telephone Hybrid as well as stereo line inputs in case only one Hybrid is needed.

Highlights are:

- \* High quality Telephone Hybrid circuit to directly connect to phone lines
- \* Stereo line input
- \* Gain control
- \* Telco send Control
- \* Direct access **CONN**ect and **TB** (Talk Back) switches
- \* Stereo Aux send
- \* Stereo CUE switch for pre fade listening
- \* Start (ON) switch
- \* 100mm smooth professional faders

### WHAT IS A TELEPHONE HYBRID?

Telephone hybrids are hardware interfaces between professional audio equipment and public telephone networks. They provide protection for your equipment and the public telephone lines, allowing for various line signals and line conditions. Automatically canceling out the unwanted signal, they facilitate two-way communication when using a single 2 wire telephone line.

Each Airmate-USB hybrid module has a Telephone line (WALL) connection and a handset connection.

Thousands of D&R Telephone Hybrids (also built into this Airmate-USB) are used in radio and television broadcasting facilities around the World allowing external callers to be connected to the studio mixer for live broadcast. Many of the D&R Telephone Hybrids are supplied to radio stations allowing extremely effective conversion between 4-wire audio circuits and standard 2 wire telephone lines.

### Specs:

Output : Internally connected in the Airmate.  
Input : Line level 0 dBu balanced, internally connected in the Airmate.  
R/C balance : fully adjustable.  
Separation : more than 30dB.

**The controls of the Hybrid/Line modules have the following functions.**

### TELCO SEND

With this control you adjust the level of the outgoing signal to the telephone line.

### TELEPHONE HYBRID / STEREO LINE INPUT SWITCH

When switched to the stereo line input, you have a high impedance line level input for connecting cart machines, iPods, tape machines, or CD players.

The up position of this switch changes this module into a full blown telephone Hybrid module. It is a Hybrid that can be connected to any standard telephone line.

### R-BALANCE

Internal potentiometer (screwdriver control) to adjust for maximum side tone attenuation via top panel hole.

### C-BALANCE

16 position rotary switch to select the optimum side tone attenuation.


### GAIN

With the **GAIN** control, the source level is adjusted to the internal mixer level. This is for both the Telephone Line input and the Stereo Line inputs.

### CONNect

This switch (when pushed) picks up the phone line when a call comes in.

Note: the incoming call will not be heard until the CUE is pressed or the ON switch and the fader are activated which brings the signal to the mixer.

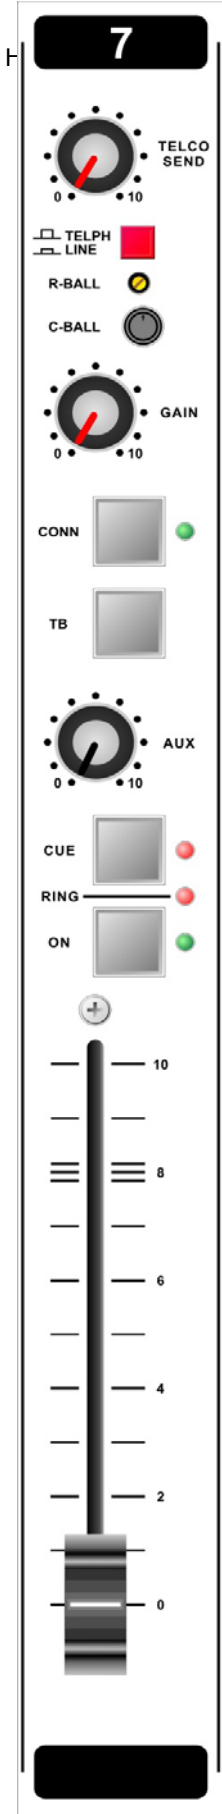

**TALKBACK**

By pushing the TB switch on the Hybrid module, the internal talkback microphone is activated and allows you to talk to the caller without being ON-Air.

**AUX SEND**

Below the TB switch is the stereo Aux send that can be set to send stereo source signals pre or post fader (pre or post jumper settings on the circuit board). The factory default is post fader.

**RING (LED)**

This LED lights to alert you when a call comes in.

**CUE**

Next you will see the stereo CUE switch (Pre Fader Listening). This switch allows you to check the signal before you mix it with your other channel signals in the mixer.

**ON**

The ON switch is used to activate the module and generate a signal to start turntables, CD players, and cart or jingle machines. This switch sends out a momentary pulse or switches continuously to the Start connector on the back of the console. When used on either of the Hybrid modules, any other function needed can be activated.

**FADER**

Final control of the signal in either of these modules is the 100mm channel fader. With the fader you can send the amount of signal from this module to be mixed with the other signals feeding the outputs whether the need is live streaming or recording for production. At the beginning of the fader movement you will feel the internally built in start switch that is activated when you bring up the fader. This switch activates the start circuitry which can control externally connected (via the Start Connector on the back) devices such as CD players, turntables, etc.

**INPUT CONNECTORS**

On the back of each of the AIRMATE-TELCO modules 7 and 8 you find five connectors.

Two unbalanced **stereo line** RCA Cinch connectors for connecting CD players, iPods, or any play-back devices as long as they are line level equipment.

The level can be set using the **gain** control to match most source levels.

The left RCA Cinch connector is the left input and the right RCA Cinch connector is the right input. The shield is to be connected to the ground or case of the RCA Cinch connector.

**The START switch** has two active connections to be wired. The tip and ring are shorted when the ON switch or fader switch is activated.

Once you have done this, you can start the turntable with the ON (if connected to the START connector) switch on the back panel.

These switches quick start turntables through the remote jack by a continuous contact action at the back of the mixer. If your turntable only needs a pulse to start ask your dealer to modify the internal circuitry to change it into a momentary action, so you can use it as a pulse start switch.



**\*NEVER CONNECT ELECTRICAL POWER TO THIS REMOTE-JACK\***

Connections on the START connector should only be made with a maximum of 24 Volts by 50 mA.

Please contact your dealer in case of doubt.

The two **RJ11** connectors connect the TELCO Module to the telephone landline (Wall) and to your Telephone set so you can dial-out to people you want to interview or pick up incoming calls from your radio program listeners.

RJ11 type of cable that can be used to connected both the Telephone set and the mixer and the mixer to the wall outlet

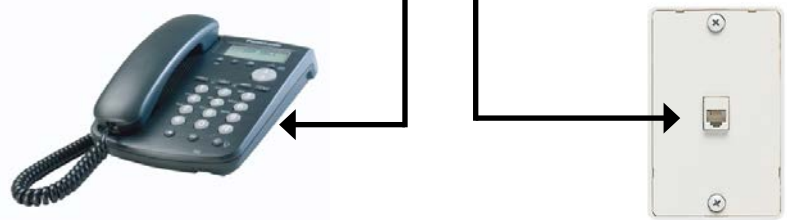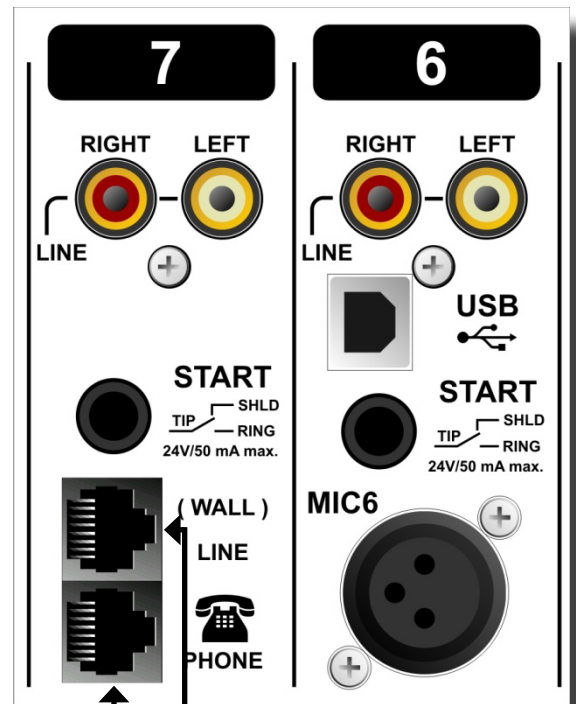

**SPECIAL AVAILABLE OPTIONS IN YOUR AIRMATE-TELCO MODULE**

On the input PCB of your AIRMATE-USB module there are several jumpers that can be changed to enable different configurations of the channel settings. This should be done by a D&R dealer or service center.


The following 4 jumper settings can be changed to adjust the Airmate-USB Telco modules to your needs.

1	J6/16	Stereo Aux send pre or post selectable via Jumper J6/16 (post is default).
2	J7	Clean-Feed (CLN-FEED) jumper (J7) to select whether the audio stereo signal (summed to mono) is sent to the clean-feed bus (available in the master section for external Hybrids).
3	J17	Pulse/continuous Jumper J17 to change the start pulse from latching (continuously) to pulse.



**CONNECTION WIRING OF BOTH (Wall) LINE and PHONE RJ-11 CONNECTORS**

PHONE/WALL RJ-11	FUNCTION	CONNECTION
Pin 1	n.c.	
Pin 2	A (telephone line)	In/out
Pin 3	B (telephone line)	In/out
Pin 4	n.c.	

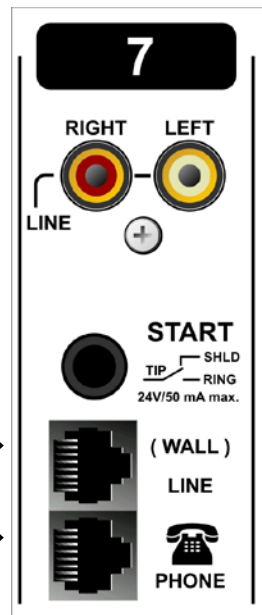

## **VoIP-LINE MODULE 7/11 and/or 8/12, CONNECTORS, CONTROLS, & FUNCTIONS**

Input module 7/11 and/or 8/12 are dedicated Voice over IP Telephone module and also have a stereo line input in case a classisc Hybrid is needed.

### **Highlights are:**

- \* High quality Telephone Hybrid circuit to directly connect to the Internet.
- \* Stereo line input.
- \* Gain control.
- \* VoIP/Telco send Control.
- \* Direct access CONNect and TB (Talk Back) switches in the master section.
- \* Stereo Aux send.
- \* Stereo CUE switch for pre fade listening.
- \* Start (ON) switch and 100mm smooth professional fader.

### **VoIP-CHANNEL**

In the AIRMATE-USB we have built in an interface that let you connect to the Internet community by way of (for instance) Skype. Skype is freely available communication software that can be used to call and receive calls of your listeners to your broadcast station. We have designed a separate USB connector on the backpanel of your console to interface with SKYPE software. This could be on the same PC (on a second USB connector) as the Play-out system is installed or on a separate PC for dedicated use of the VoIP chan-nel with SKYPE software. For downloading the SKYPE software go to <http://www.skype.com> and then to your own language for more support. There are some SKYPE software settings you need to go through before this is working with your console. For some usefull instructions go to:

<https://support.skype.com/nl/faq/FA34541/een-perfect-skype-gesprek-voeren>

(Dutch instruction video, but I am sure there is one in your own language or in English of course).

### **VoIP (TELCO) SEND**

With this level control the outgoing signal from the mixer is sent to the caller via Skype or and via an external connected Hybrid. This is for both the VoIP and the Stereo Line input (when selected). This Hybrid get's it send signal from the cleanfeed output on the back of the console.

### **TELEPHONE/LINE SWITCH**

When switched to the VoIP (Phone) up position only the VoIP signal is received. When this switch is down, you have a high impedance stereo line level input for connecting an external Hybrid or... cart machines, iPods, tape machines, CD players etc.

### **GAIN**

With the GAIN control, the source level is adjusted to the internal mixer level. This is for both the VoIP and the Stereo Line input (when selected)

### **CONNect**

This switch (when pushed) picks up the VoIP/Hybrid signal when a call comes in. Note: the incoming call will not be heard until the CUE is pressed or the ON switch and the fader are activated which brings the signal to the mixer. You can of course have a handset with dial possibility to dial and pick up calls from the caller first before you connect the caller to the mixer by pushing the CONNect button. To hear the caller you have to push the CUE button and to bring the caller on-air push the ON switch and pull up the fader.

### **TALKBACK**


By pushing the TB switch on the VoIP module, the internal talkback microphone is activated and allows you to talk to the caller without being ON-Air.

### **AUX SEND**

Below the TB switch is the stereo Aux send that can be set to send stereo source signals pre or post fader (pre or post jumper settings on the circuit board). The factory default is post fader.

### **CUE**

Next you will see the stereo CUE switch (Pre Fader Listening). This switch allows you to check the signal before you mix it with your other channel signals in the mixer. A second very important function is that this Cue buss is also designed to be a N-1 communication buss. It means that a caller hears any signal connected to this Cue buss except his own signal. So communication between a DJ channel and the caller is possible without having to mix in the DJ channel and the caller in the broadcast.

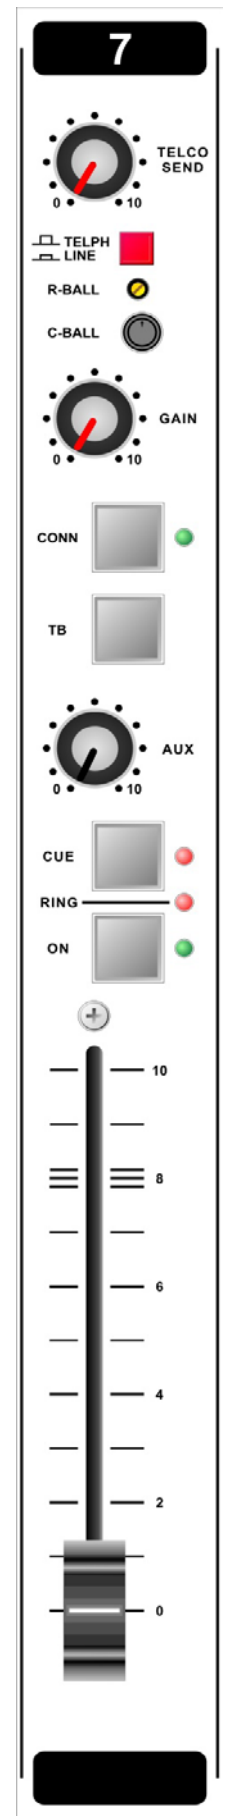

## RING (LED)

This LED lights to alert you when a call comes in. You can also connect a warning light to the START jack to be visually informed that a call comes in (when you wear headphones).

## ON

The ON switch is used to activate the module. This switch sends out a momentary pulse (default) or switches permanently (continuously) between tip and ring of the Start connector on the back of the console. You can also use this START connector to control an external Ring indicator that a call is coming in. This is the default setting of the related jumper. You will notice that the internal LED of the ON switch will not light when pushed as long as the fader is not up alerting you that there is no signal sent to the busses (Program or Sub).

## FADER

Final control of the channel is the 100mm long throw K-Alps stereo channel fader with integrated fader start switch. The channel fader sends the amount of signal from the associated channel to the master mix buss.

At the right side of the fader you see a dB labelling starting at the top with no attenuation (0) and sliding down it attenuates in steps of 5dB until it reaches a full cut off below -90dB. When you are used to fully throw the fader in its top position when opening a channel it is advisable to set the fader gain jumper to 0dB (factory default). If you need a little bit of "playground" for your audio, set the jumper to +10dB fader gain and see the -10dB (10) position as your unity gain position. At the beginning of the fader movement you will feel an internally built in start switch that is activated when you bring up the fader. This switch activates the start circuitry and controls externally connected devices such as CD players etc (via the Start connector on the back).

## INPUT CONNECTORS VoIP (Telco2 Telco1)

On the back of each of the AIRMATE-VoIP(TELCO) modules 7/11 and 8/12 you find five connectors. Two unbalanced stereo line RCA Cinch connectors for connecting CD players, iPods, or any play-back devices as long as they are line level equipment. The level can be set using the gain control to match most source levels. The left RCA/Cinch connector is the right input and the right RCA/Cinch connector is the left input. The shield needs to be connected to the ground or case of the RCA/Cinch connector.

The START switch has two active connections to be wired. The tip and ring are shorted when the ON switch or fader switch is activated. Default the tip and ring are shorted when a call is coming in to alert someone is calling the studio. In case Fader start is jumpered, you can use this connector to activate an external ring indicator such as our D&R PHONE light.

## \*NEVER CONNECT ELECTRICAL POWER TO THIS REMOTE-JACK\*

Connections on the START connector should only be made with a maximum of 24 Volts by 50 mA.



Please contact your dealer in case of doubt.

## USB CONNECTOR

The bottom RJ11 connector (Phone) is replaced by a USB connector to directly communicate with your PC (internet) via a USB cable connected to a spare USB connector on your PC.

## CLEANFEED OUTPUT

The top RJ11 connector (WALL) now provides you with a cleanfeed signal on pin 1 and 4 to connect to an external Hybrid.

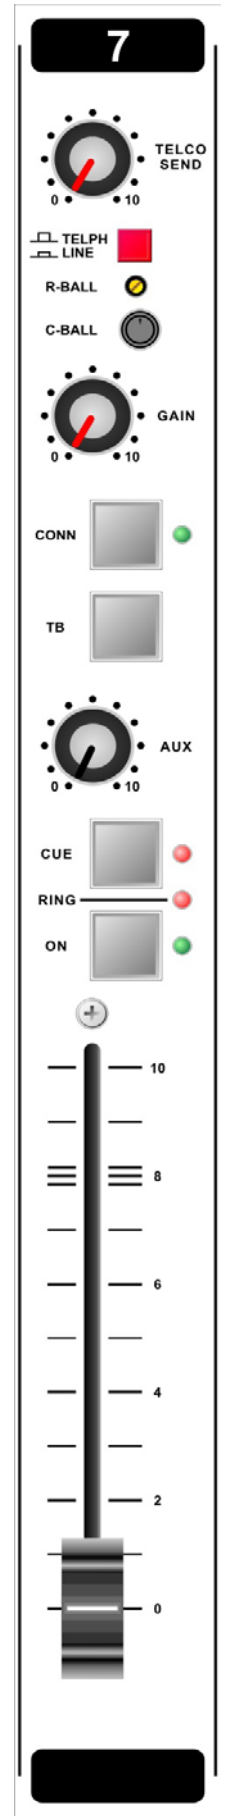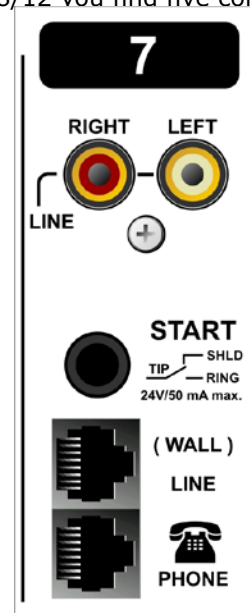



## BLUETOOTH-HYBRID/LINE MODULE 7/11 and/or 8/12, CONNECTORS, CONTROLS, & FUNCTIONS

Input module 7/11 and/or 8/12 can be populated with a Bluetooth Hybrid module with line input.

### HIGHLIGHTS

- High quality Telephone Hybrid circuit to directly connect to a Bluetooth device
- Take Bluetooth calls and play/pause music directly on your AIRMATE-USB console
- Bluetooth V5.0 specification
- Bluetooth audio with high resolution up to 24-bit/96kHz audio
- Stereo line input
- Gain control
- VoIP/Telco send Control
- Direct access CONNECT and TB (Talk Back) switches in the master section
- Stereo Aux send
- Stereo CUE switch for pre fade listening
- Start (ON) switch and 100mm smooth professional fader

### BLUETOOTH HYBRID CHANNEL

The Bluetooth module for the AIRMATE-USB uses our high quality Telephone Hybrid circuit to enable you to make calls on your Bluetooth enabled device during your broadcast. It also supports high quality Bluetooth audio, so playing music on your AIRMATE-USB has never been easier.

### CONNECTING TO A BLUETOOTH DEVICE

Once the AIRMATE-USB has been switched on, the Bluetooth Hybrid will be in standby mode. The blue LED will be off.

- Press and hold the CONN button to enable pairing mode. The blue LED will start blinking.
- On your Bluetooth enabled device, search for "D&R AIRMATE". Click connect.
- When a connection is successful the blue LED on the Bluetooth Hybrid will stop blinking and stay on.
- If no action is taken the Bluetooth Hybrid will automatically go out of pairing mode and into standby mode after 30 seconds. The blue led will stop blinking and go off.

Now that the Bluetooth Hybrid and your other device have been paired, the next time the AIRMATE-USB is switched on the Bluetooth Hybrid will automatically search for known devices and connect to it.

### DISCONNECTING A BLUETOOTH DEVICE

Press and hold the CONN button.

The Bluetooth Hybrid will disconnect from the current device and go into pairing mode.

### TAKING A BLUETOOTH CALL


Once connected to the Bluetooth Hybrid you can now take calls on your AIRMATE-USB (if the other device supports Bluetooth HFP/HSP).

- When you are being called the RING led will blink. You can pick up the call by pressing the CONN button. The green CONN led will be lit. Note: the incoming call will not be heard until the CUE is pressed or the ON switch and the fader are activated which brings the signal to the mixer. To hear the caller you have to push the CUE button and to bring the caller on-air push the ON switch and pull up the fader.
- When a call is active, to disconnect the call press the CONN button again. The green CONN led will be off.

### BLUETOOTH AUDIO

Once connected to the Bluetooth Hybrid you can now play music on your AIRMATE-USB. Choose your favourite player (Playout software, Spotify etc.) and press play on your device.

- It is also possible to play/pause music using the CONN button on the AIRMATE-USB. When music is not playing the CONN button will play music, when music is playing the CONN button will pause the music.

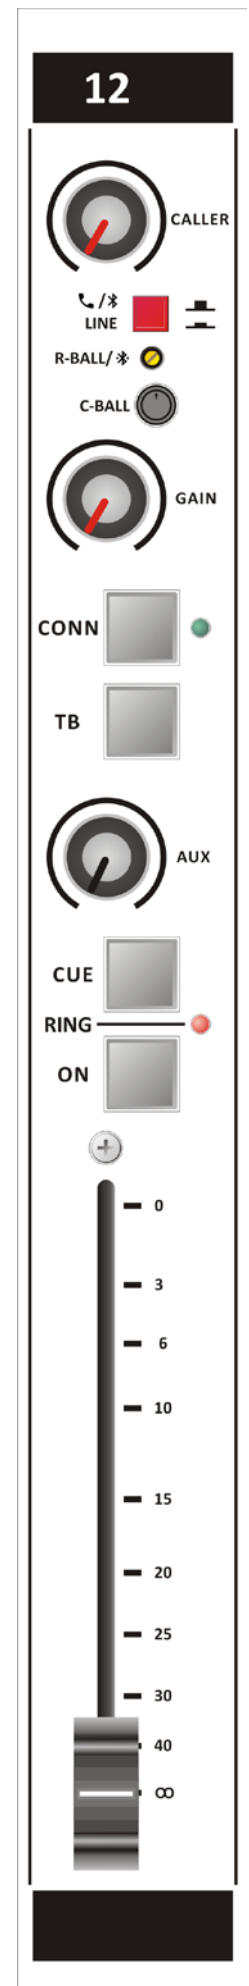

## **BLUETOOTH HYBRID SEND**

With this level control the outgoing signal from the mixer is sent to the caller via Bluetooth Hybrid. This is for both the Bluetooth Hybrid and the Stereo Line input (when selected). This Bluetooth Hybrid gets its send signal from the cleanfeed output on the back of the console.

## **TELEPHONE/LINE SWITCH**

When switched to the up position only the Bluetooth Hybrid signal is received. When this switch is down, you have a high impedance stereo line level input for connecting iPods, tape machines, CD players etc.

## **GAIN**

With the GAIN control, the source level is adjusted to the internal mixer level. This is for both the Bluetooth Hybrid and the Stereo Line input (when selected).

## **TALKBACK**

By pushing the TB switch on the Bluetooth Hybrid module, the internal talkback microphone is activated and allows you to talk to the caller without being ON-Air.

## **AUX SEND**

Below the TB switch is the stereo Aux send that can be set to send stereo source signals pre or post fader (pre or post jumper settings on the circuit board). The factory default is post fader.

## **CUE**

Next you will see the stereo CUE switch (Pre Fader Listening). This switch allows you to check the signal before you mix it with your other channel signals in the mixer. A second very important function is that this Cue buss is also designed to be a N-1 communication buss. It means that a caller hears any signal connected to this Cue buss except his own signal. So communication between a DJ channel and the caller is possible without having to mix in the DJ channel and the caller in the broadcast.

## **RING (LED)**

This LED lights to alert you when a call comes in. You can also connect a warning light to the START jack to be visually informed that a call comes in (when you wear headphones).

## **ON**

The ON switch is used to activate the module. This switch sends out a momentary pulse (de-fault) or switches permanently (continuously) between tip and ring of the Start connector on the back of the console. You can also use this START connector to control an external Ring indicator that a call is coming in. This is the default setting of the related jumper. You will notice that the internal LED of the ON switch will not light when pushed as long as the fader is not up alerting you that there is no signal sent to the busses (Program or Sub).

## **FADER**

Final control of the channel is the 100mm long throw K-Alps stereo channel fader with integrated fader start switch. The channel fader sends the amount of signal from the associated channel to the master mix buss. At the right side of the fader you see a dB labelling starting at the top with no attenuation (0) and sliding down it attenuates in steps of 5dB until it reaches a full cut off below -90dB. When you are used to fully throw the fader in its top position when opening a channel it is advisable to set the fader gain jumper to 0dB (factory default). At the beginning of the fader movement you will feel an internally built in start switch that is activated when you bring up the fader. This switch activates the start circuitry and controls externally connected devices such as CD players etc (via the Start connector on the back).

## **INPUT CONNECTORS BLUETOOTH HYBRID**

On the back of each of the AIRMATE-BLUETOOTH-HYBRID/LINE modules 7/11 and 8/12 you find three connectors. Two unbalanced stereo line RCA Cinch connectors for connecting CD players, iPods, or any playback devices as long as they are line level equipment. The level can be set using the gain control to match most source levels. The left RCA/Cinch connector is the right input and the right RCA/Cinch connector is the left input. The shield needs to be connected to the ground or case of the RCA/Cinch connector.

The START switch has two active connections to be wired. The tip and ring are shorted when the ON switch or fader switch is activated. Default the tip and ring are shorted when a call is coming in to alert someone is calling the studio. In case Fader start is jumpered, you can use this connector to activate an external ring indicator such as our D&R PHONE light.

## **\*NEVER CONNECT ELECTRICAL POWER TO THIS REMOTE-JACK\***

Connections on the START connector should only be made with a maximum of 24 Volts by 50 mA. Please contact your dealer in case of doubt.

## 8. MASTER SECTION

---

The AIRMATE-USB master section houses all the controls for the mix buss faders and master controls for Aux return, 2-Track play-back, and master outputs. Individual functions are described below.

### **LEDBAR METERS**

The master section has two **high-res 21 segment LEDbar meters** with VU meter Ballistics. Depending on which switch is pressed (Cue on channels, AUX SEND master, AUX RET, 2 TRACK, etc.), the master meters will allow the reading of all input and outgoing signals. The attack and release time constants conform to International VU meter standards, being 300mSec for attack and decay. The green area of the LEDbar is the safe area and the yellow area (3 led's) is the range that normally would be on with the proper amount of signal. Occasionally a red led on is no problem.

The **output** of your AIRMATE-USB is **+4dBu** (1.22v) ("0" VU) when the top green LED is on.

### **MASTER MONO SWITCH**

This switch turns the stereo signal into mono for both main outputs. Using this switch is a convenient way to check and balance the left & right signals before going to stereo as well as checking the overall Phase response. Also when one side of the stereo signal is not available, the mono switch directs the mono signal to both outputs.

### **AUX SEND**

The stereo **AUX SEND** master controls the sum of the entire individual Aux send signals coming from the input channels.

### **AUX CUE**

The AUX SEND **CUE** switch allows for the master LED bar meters to display the Aux output signal of the Aux master as well as hear the signal from the AUX buss.

It is necessary to turn the AUX SEND master control up to create and show an outgoing signal.

### **MONITOR**

The **MON** (monitor) control is fed by the master outputs pre (before) the master faders. This can be used as an extra stereo output for recording or a sound system in which you do not want the master faders to change the out-going signal.

### **FOLLOW PHONES**

This switch is an input selector for the **MON** (monitor) output. Instead of listening to the main outputs, it allows the user to listen to the phones output. This feature is used by announcers and DJ's that do not want to use headphones.

### **2-TRACK**

The 2 TRACK switch allows for playback of the outputs from stereo devices such as CD players, tape machines, computer sound cards, iPods, etc. to be routed to the MON (monitor buss). Its sensitivity is -10dBv (300mV).

Note: The Cue system (from anywhere in the mixer) will interrupt the 2 track signal when activated.

### **AUX RETURN**

This stereo input is intended to be used for returning the stereo outputs of reverbs or other effects gear and is connected directly to the stereo main mix buss. It can also be used to connect the output of other mixers so you don't use input channels.

### **CUE AUX RETURN**

This switch enables you to listen to an incoming Aux return signal before the AUX RET (Return) control pot.

### **BALANCE**

The balance knob controls the balance between the main stereo output and the stereo Cue signal when selected. With the balance control anywhere between Cue and L/R you always have control over the main output signal even when a Cue switch is activated.

*Note: The split switch de-activates the balance control.*

### **SPLIT**

When the split function is activated the following listening situation is created. The left side of the phones output gives the summed Cue signal and the right output gives the summed left/right signal (pre fader). With the SPLIT switch activated, the balance control has no influence on the configuration any longer.

## **PHONES**

The phones output (located on the front panel) automatically switches between main mix outs and QUE from any input modules or on the Master section. Normally the left/right output is heard until a Cue switch is activated from anywhere in the console. Pressing a CUE switch, you will hear the associated signal rather than the left/right signal in the PHONES. The led bar switches accordingly with this action.

We advise you to use headphones with an input impedance **NO LOWER THAN 400 Ohms** to avoid mismatch or distortion.

An 8 Ohm set of headphones will produce distortion when cranking up the level of the Airmate-USB due to the impedance load is too low. If you must use 8 ohm phones, a small power amp should be used to power the phones. It is a load equivalent to the load that loudspeakers normally present to power amps. The AIRMATE-USB has no power-amp.

## **MASTER FADERS**

The AIRMATE-USB master faders are 60mm models controlling both left and right signals individually to compensate for imbalances in the left & right audio signals.

## **SELF-OP**

This switch mutes the monitor output (control room monitor speakers) as soon as a microphone input is opened. At the same time a relay is activated which is connected to the Red Light output connector.

## **CLEANFEED OUTPUT**

The Clean feed output sums all signals coming from the input modules (except for those inputs where jumper J7 is not activated). Clean feed signals are equivalent to Aux send signals, but are always post fader. By jumpering only those channels that are not returning Telephone Hybrid signals you avoid feedback and have a perfect set-up for talk shows. The Clean feed output is only used when an external Hybrid is used.

## **CLEANFEED**

All outgoing signals from the Clean feed output can be monitored via the Cue system.

## **ANNOUNCER OUTPUT**

In the up position of the "follow phones" switch, the input of the announcer is fed by the main left/right signal pre master fader. In the depressed mode of the "follow phones" switch, the Announcer output is fed via the same signal as the phones output.

## **FOLLOW PHONES**

This switch is the input selector of the announcer output, see above description.

## **TALK BACK**

The Talkback circuit has a built in electret microphone with routing to most of the outputs.

By selecting one or more of the routing switches, you can communicate to the outputs.

The Talkback level is independent of settings of the master controls, the Clean feed, and Announcer outputs. It is however put through the master level of the master Aux output control. The Talkback switch has a momentary action to avoid being in the talkback mode when not wanted.



**MASTER CONNECTORS**

The master connector panel houses 12 RCA Cinch connectors, 2 jack sockets, and 2 male XLR connectors. The electrical mains connector with integrated fuse holder is located in this section. A ground terminal completes the back panel connector section.

**TAPE OUTPUTS**

The tape output connectors are left and right outputs for connecting to the inputs of a stereo audio recorder or any other analog or digital device. Output level is -10dBv (300mV), the signal is pre master fader.

**CLEANFEED OUTPUTS**

Direct beneath the Tape outputs are the Clean feed RCA cinch output connectors.


**MIC ON**


Directly beneath the Clean feed RCA cinch connectors is a stereo jack socket (Mic On) that can control a red light indicator. This stereo jack is connected to an opto coupler. This opto coupler can pull down (or shorten the tip and ring of a connected stereo jack and can controlling external Red light circuits as long as it doesn't take a higher voltage than 24 volt and the current doesn't exceed 50mA! Please have look at our ON-AIR light that can be switched on with a simple 2 wire connection. Look at <http://www.d-r.nl/on-air-light.html>

**NEVER CONNECT 115/230 AC VOLTAGE TO THIS JACK!!**

The Tip is connected to the Opto coupler.  
 The Ring is also connected to the opto coupler.  
 The Ground is not connected.

**9. AIRMATE-USB MIC-ON LIGHT / START EXAMPLES**

Start / Mic-On Jack with reed relays (only on leaded models)			
		Function reed relais contact	Comment
	Tip	CC (Center Contact)	Max. 24V, 50mA. By jumper selection Pulls or Continue.
	Ring	NO (Normal Open)	
	Sleeve	NC (Normal Close)	

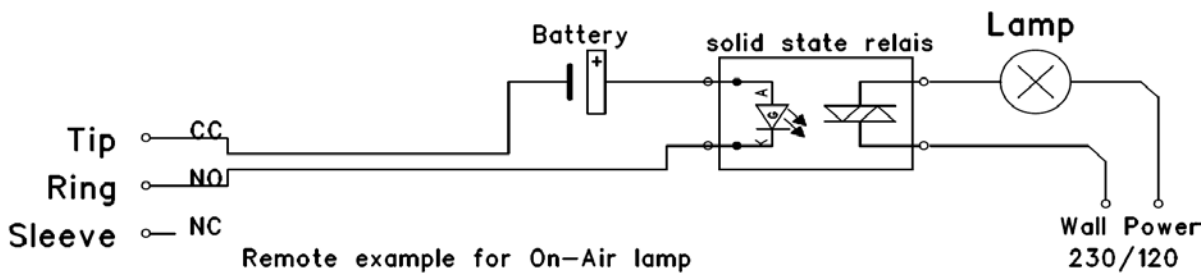

For our AIRMATE-USB SMD models

**Only the tip and ring of the MIC-ON master jack are used in the smd version. An opto coupler shortens the Tip with the Ring (of a stereo jack) to control ON-AIR lights connected.**

**Note: Our latest D&R ON-AIR warning light design does not need an external relay. Just 2 wires from the MIC-ON control output jack (tip-ring) of your AIRMATE-USB to the barrier strip inside the ON-AIR lamp and that is it!**

### **AUX RETURN**

The Aux return connectors are controlled by the Aux return control on the master section. The signal is connected directly to the master main mix busses. You can connect reverb returns or other stereo signals without using any input modules. The input level should -10dBv as a minimum.

### **AUX OUTPUTS**

The aux outputs are on two RCA Cinch connectors with the signal coming from the aux send controls in the channels. The level is +4dBu (1.22 volt).

You can connect the inputs of reverbs from these outputs or use them as a monitor output, after you jumper the Aux send in the channels to pre fader.

### **2-TRACK INPUTS**

These inputs are intended to return stereo machines in the monitor section.

Such as signals from master recorder/tuners etc. The level needs to be -10dBv (300mV) as a minimum for optimum signal to noise.

### **MASTER OUTPUTS**

The master outputs are 3 pin male XLR connectors and are ground compensated balanced with all the advantages of balancing are maintained when connected to a balanced input of a power amp, professional recorder, or On-Air processor. The output level is +4dBu (1.22 volt).

### **GROUND CONNECTOR**

This terminal can be used for grounding Phono players as well as the central ground point in a complex installation set-up.

### **MAINS CONNECTOR**

The mains inlet is a Euro type connector with built in fuse. Your AIRMATE-USB can accept voltages between 210 volts and 230 volts 50/60Hz or with the proper modification for 120 volts. When using the Airmate-USB at 220 volts, a 1 amp slow-blow fuse should be used, however, when using the mixer at 120 volts, a 2 amp slow-blow fuse should be used. Consult with your local dealer or D&R Service Center for power supply modification to change from 220 volts to 120 volts AC. Never replace either fuse with a higher value.

## OPTIONAL MASTER AES/EBU XLR CONNECTORS

If you have chosen to order digital outputs on your mixer the master AES/EBU XLR's will be your digital in and outputs to go fully digital to the transmitter or other broadcast devices connected to the AIRMATE-USB.

As you can see in the picture below there are 2x 3 pin male XLR connectors, normally providing you with ground compensated balanced analog outputs that give the main program stereo signal, but now these are converted into a balanced digital AES/EBU standardized output signal (XLR male) and... as a bonus you get also the possibility for accepting digital AES/EBU signals on the second XLR (female).

Above these XLR's are 2 stereo jacks that also signals out the main program signal, labelled Output Right and Output Left, in case the main outputs are converted to digital there will always be analog outputs available.

In case you have ordered a digital stereo output on the mixer the AES/EBU output is wired to the Left male XLR indicated by the reversed text AES OUT. Levels can be adjusted internally if needed.

The other Male XLR now becomes the AES/EBU input and that digital stereo signal can be routed to the 2 Track inputs, that can be listened to by the 2 track front pushbutton knob and connected to any input of the console with a stereo cable from these 2 TRACK cinch sockets to any line input

All the rest of the connectors are unchanged in function.




NOTE: In the standard (non digital) AIRMATE-USB the jack output jacks are not available

### OPTIONAL MASTER AES/EBU XLR CONNECTORS

Below you see one of the master boards with the digital pcb mounted. On the left side of this small pcb you see jumpers. Now they are jumpered as default that the digital input signal is NOT routed to the 2 Track cinch connectors. If you want that you have to move both jumpers from the right position to the left position.

Below these 2 jumpers you see 2 blue trimpots that can change the level of the digital outputs. Now

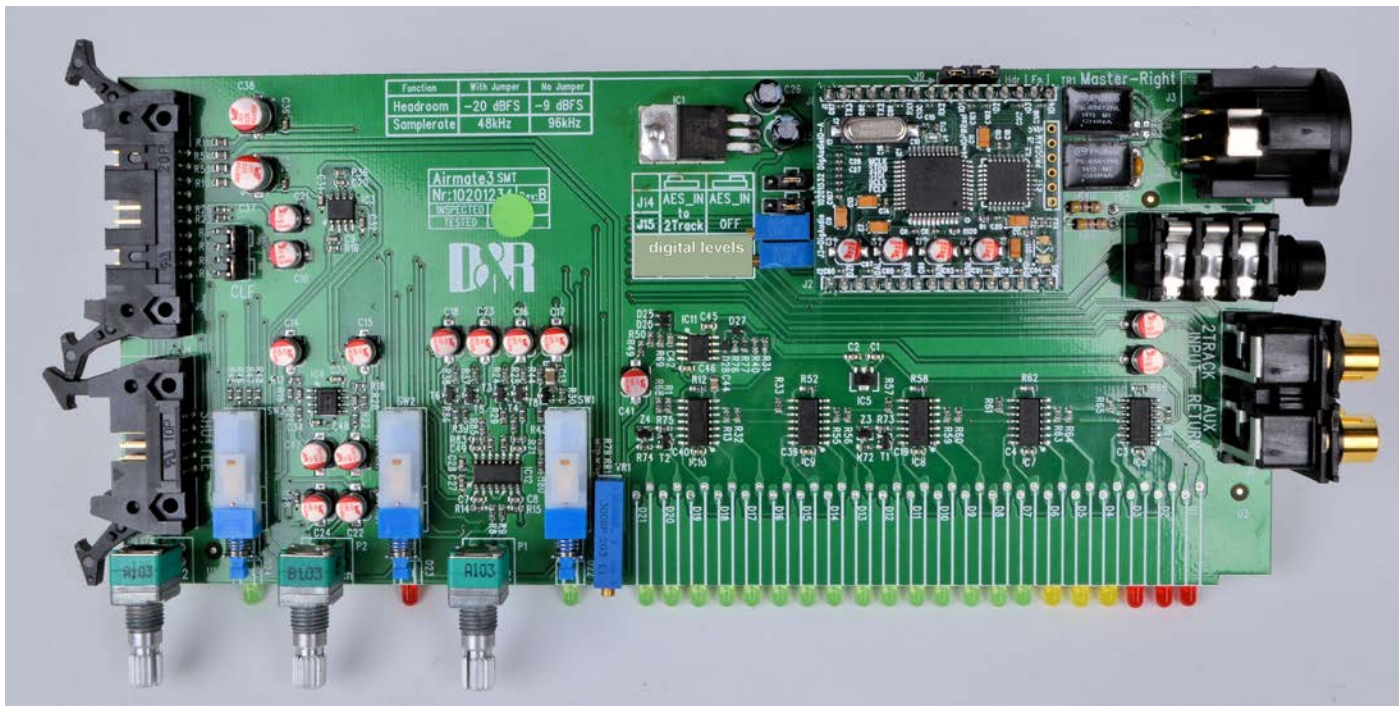

Close up of jumper settings

Digital level trimmers for main output left and right



## 10. SET-UP ROUTINES MODULE 1-4/8

---

- Connect a power-amp, recorder, or transmitter to the left/right outputs.
- Connect a high impedance headphone to the "phones" jack socket on the master section.
- Connect the microphones as described.
- Now, connect turntables, CD players, and jingle machines.
- If more than 2 Telephone Hybrids are needed, you can connect another Hybrid to the Clean feed output.  
*Be sure that Jumper J7 is on position 3-4 to avoid feedback when returning the Telephone Hybrid output on the channels.*
- Connect a red light indicator when there is a need for it.
- The Announcer output can feed high impedance (400 ohms and above) stereo headphones directly.
  
- Now with everything connected, follow the adjustment procedure.  
Note; for mikes, only activate the grey Mic switch, for line level, leave this switch up and select line A or B.
- Put on your headphones and turn the headphone volume control to the "12 o'clock" position.
- Turn all the gain-controls and the master-control off (counter clockwise).
- Set all equalizer-controls to the "12 o'clock" position.
- All pushbutton-switches should be in the up position. (See above).
- Switch on the power-supply, the first LED in the LEDbars should be on.

### **SETTING UP AN INPUT CHANNEL**

- Push the CUE switch in a channel that is connected to a source.
- Now slowly turn the GAIN control clockwise until you hear and see the input signal on the LEDbars in the master section.
- You can change the input sound by adjusting the equalizer-section.
- If you adjusted the equalization, once again check the level on the led bar, because increasing specific parts of the frequency spectrum can easily add more gain to the signal.
- If you can't get enough gain (when you have a low sensitivity dynamic microphone) the jumper on J5 (on the channel PCB) should be removed to get an extra 20dB of gain.
- The LEDbar indication should be between 0 dB and +6 dB (the yellow area) to get a proper level on amplifiers or recording devices.
- The LEDbar is a VU meter indicating the absolute level that enters the console.
- It is calibrated to indicate 0 dB on the scale corresponding with a +4dBu output level.
- Release the CUE switch so the led bar now reads the output signal again.
- Now push the ON button to connect the input signal to the fader.
- Now move the fader to the "8" position screened alongside the channel faders and turn up the master fader to the "10" position. Further volume adjustments can be made on the equipment your signal is feeding, such as power-amps or transmitters.
- The other inputs are similarly adjusted, using the "CUE" switches to (pre fade) listen to the connected sources. Use the input gain for precise adjustments.

Be carefully not to place the AIRMATE-USB near heavy power transformers such as power amps. Although the AIRMATE-USB is constructed using a thick medal frame, this could cause hum.

## 11. SETTING UP THE USB MODULES

---

Input modules 5 & 6 are identical to triple input modules 1 thru 4 except for line-B input is replaced with a USB (stereo input and output circuit) connector on the back panel.

To be able to set up a connection with your PC, use a standard USB cable from a local computer shop. (See pic-



When connecting the Airmate-USB to your computer, the computer (PC or Mac) will recognize the Airmate as new hardware and will establish a connection to any audio programs needing audio hardware.


After establishing a connection, there is no need to download drivers or performing complicated setup routines, just plug in the USB cable to your Windows or Mac computer and start tracking!

If you first want to know more about USB try this link [http://en.wikipedia.org/wiki/Audio\\_Stream\\_Input/Output](http://en.wikipedia.org/wiki/Audio_Stream_Input/Output)

If you are already familiar with digital audio recording, the latest versions of Kristal Audio Engine and Audacity are available free of charge via the Internet. Use this link <http://www.asio4all.com/> for third party downloads.

## 12. SETTING UP THE TELCO MODULES

Connect the two wires of the telephone line's wall unit to the RJ-11 connector labeled wall (LINE) and connect the telephone appliance itself to the RJ-11 connector labeled PHONE. Note that to originate calls, a local phone must be connected to the Airmate-USB.

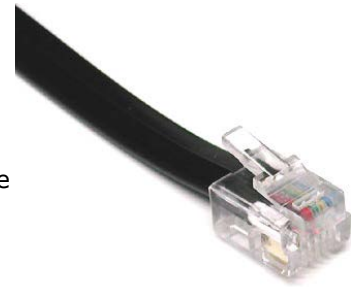

Now the internal hybrid is interfaced (fully balanced) between your telephone appliance and its connection to the outside world. The hybrid can now split the send and return signals.

Position both Telco send and gain potentiometers in the 12 o'clock positions. If a local phone is connected, originate a call to a remote site (someone's phone). If no local phone is present, someone at a remote site must call you. When a call comes in, the red RING LED (positioned between the CUE and ON switches) lights up each time the phone rings. The line is picked up by pushing the CONN button.

If you want to hear the caller, press the CUE button to listen to the incoming call. Adjust the Gain control to get a good input level from the telephone line. To be able to talk to the caller press the TB (Talkback) button and... talk to him.

Adjust the Telco send potentiometer to increase or decrease the outgoing level to the caller. Note: This is all happening outside of the broadcast.

If all is Ok and both parties know what to do, you can press the ON switch and fade up the caller ON-AIR, or, put the fader in its "8" position and activate the ON switch to put the caller on-air.

Before going "live" with your caller, you will need to adjust the optimum RC balance to create the best separation of in and outgoing signals to the telephone line, otherwise your listeners will be presented with bad quality audio. These adjustments are only required once when installing the Airmate-USB.

To achieve the optimum attenuation, you must adjust the C and R balance first. This is how it is performed:

1. Check if the Telephone connection is established and all connections to the mixing console are correctly wired.
2. Send an audio signal to the telephone line by activating another module, for example, a CD player.
3. Now activate the CUE button of the TELCO module where the telephone line is connected.
4. You will faintly hear the send signal coming out of the mixing console.
5. Adjust the R-Balance for minimum feed through of the mixers send signal.
6. Listen now which switch position of the C-balance gives a further reduction of the return signal.
7. Maybe it is good to re-adjust the R-balance after having selected another switch position.
8. Repeat steps 5 and 6 until no further improvement is achieved for this telephone line.
9. Note: If you use the mixer in different locations this procedure must be done again.

**Below is an explanation for Germany where different telephone connectors are used.**



Eingang und Ausgang **Telefonhybrid Module** (RJ11):

**Pin 1** : nicht belegt  
**Pin 3** : Amt Leitung B  
**Pin 4** : nicht belegt

**Pin 2** : Amt Leitung A

Anschluss **Telefon** (RJ11):

**Pin 1**: nicht belegt  
**Pin 2**: nicht belegt  
**Pin 3**: Amt Leitung A  
**Pin 4**: Amt Leitung B  
**Pin 5**: nicht belegt  
**Pin 6**: nicht belegt, ..

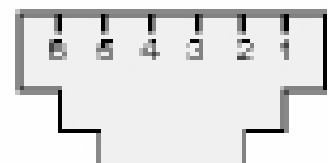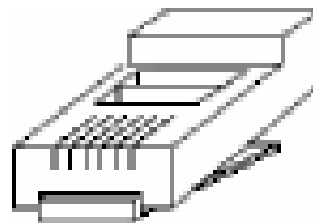

**oder bei Nichtfunktion:**

**Pin 1**: nicht belegt  
**Pin 2**: Amt Leitung B  
**Pin 3**: nicht belegt  
**Pin 4**: nicht belegt  
**Pin 5**: Amt Leitung A  
**Pin 6**: nicht belegt

Ein Verbindungskabel ist durch ein Fachmann entsprechend anzupassen!

### **13. SUMMERY**

---

We hope this manual has given you sufficient information to use this new AIRMATE-USB mixer to the extreme specs it was designed to deliver.

If you require more info please contact your local dealer or send us an email at [mail@d-r.nl](mailto:mail@d-r.nl) and we will answer your email within 24 hours during weekdays.

In case you have bought this mixer from a previous owner, check out the dealer in your area on our website [www.dnrbroadcast.com](http://www.dnrbroadcast.com) in case you need assistance.

## 14. TECHNICAL SPECIFICATIONS

---

<b>MIC INPUTS</b>	XLR connector balanced impedance 2 kOhm. Sensitivity -60dBu. Pin 1 = ground. Pin 2 = hot (in phase). Pin 3 = cold (out of phase). +48 volt Phantom power (via jumper)
<b>INSERT</b>	Stereo jack. Tip=Input (connect to output of signal processor) Ring=Output (connect to input of signal processor) Ground=shield
<b>LINE A/B</b>	Cinch connector, sensitivity -20dBu to +20 dBu. sleeve =ground.
<b>PHONO INPUTS</b>	On B inputs only when optional R.I.A.A. pre-amp is installed. 47kOhm, 0.5 mV to 10 mV.
<b>START/ON-AIR REMOTE</b>	Stereo jack, Tip is shorted to the Ring continuously or as a pulse, dependent upon jumper settings NOT FOR 110/220 VOLT SWITCHING!!!!!! <u>It can only switch 24V/50mA max!</u>

### **MASTER OUTPUT CONNECTORS**

<b>MAIN</b>	XLR male connector for left and right. pin 1 = ground. pin 2 = in phase. pin 3 = out of phase. (ground compensation circuitry, 45 Ohm) output level = +4dBu/100Ohm.
<b>TAPE</b>	Two cinch connectors for left and right. -10dBv (300mV) /10kOhm. Sleeve=ground.
<b>2 TRACK INPUTS</b>	Cinch connectors. -10dBv (300mV) / 10kOhm. Sleeve = ground.
<b>AUX RETURN</b>	Cinch connectors for left and Right. -10dBv (300mV) / 10kOhm. Sleeve = ground.
<b>CLEANFEED OUTPUTS</b>	Cinch connectors paralleled +4dBu (1.22volt) output / 47 Ohm. Sleeve = ground.
<b>MIC-ON</b>	Stereo jack connected to internal opto coupler. Tip = normally connected to Ring Ring = normally connected to Tip Ground = not connected at all
<b>ANNOUNCER OUTPUT</b>	Stereo jack for left and right Tip = left Ring = right Sleeve = Ground
<b>AUX OUTPUTS</b>	Cinch connectors (for left and right). + 4 dBu (1.22 volt) / 100 Ohm (Sleeve = ground.)
<b>MONITOR OUTPUT</b>	Cinch connectors for left and right. + 4 dBu (1.22 volt) / 100 Ohm. Sleeve = ground.
<b>PHONES:</b>	Preferable 400 Ohms or higher!

## 15. TECHNICAL SPECIFICATIONS

---

<b>INPUTS</b>	Mic input balanced 2 kOhm. Plus 48volt phantom Mic noise -122 dBr (A-weighted). Sensitivity: -70dB min, 0dB maximum. Line inputs: unbalanced, 10kOhm, Cinch gain range 40dB. Phono inputs: unbalanced, 47kOhm, 1-10 mV. 2 Track return: -10dBv at 10kOhm. Aux return: -10dBv at 10kOhm.
<b>HYBRID</b>	Output : Internally connected in the Airmate. Input : Line level 0 dBu balanced, internally connected in the Airmate. R/C balance : fully adjustable Separation : more than 30dB. (dependent upon adjustments of RC balance)
<b>OUTPUTS</b>	Left/Right/Monitor/Aux: +4dBu (1.55volt) at 47 Ohm. Tape output: -10dBv at 1kOhm. Headphone: 400-600 Ohm, 500mW.
<b>EQUALIZER</b>	High: +/- 12 dB at 12kHz shelving curve. Mid: +/- 12 dB at 1 kHz bell curve. Low: +/- 12 dB at 60 Hz bell curve.
<b>RED LIGHT</b>	Stereo jack connector to intern relay Center Contact = Tip Normally Closed = Shield Normally Open = Ring
<b>OVERALL</b>	Frequency response 10-60.000 Hz (+/- 0.5dB). Distortion: <0.009% max at 1 kHz. Power consumption: 25VA  Dimensions : 483 x 356 x 95 mm ( 8HE ). : (19" x 14" x 3.74") Weight : 11 kg. (24.4 lbs.)
<b>DROP THROUGH</b>	Drop through hole to be cut needs to be 450x330mm Depth of mixer is 95mm
<b>POWER SUPPLY</b>	<b>100-240 VOLT AC 0,74A 50/60 Hz digital switched</b>

**We wish you many creative years of productivity using this quality product from:**



**D&R Electronica b.v.**  
**Rijnkade 15b**  
**1382 GS WEESP,**  
**Netherlands**

**Phone: 0294-418 014**  
**Website: <https://www.dnrbroadcast.com>**  
**E-mail: [sales@d-r.nl](mailto:sales@d-r.nl)**



## ELECTROMAGNETIC COMPATIBILITY

This unit conforms to the Product Specifications noted on the **Declaration of Conformity**.

Operation is subject to the following two conditions:

- **This device may not cause harmful interference**
- **This device must accept any interference received, including interference that may cause undesired operation**
- **Operation of this unit within significant electromagnetic fields should be avoided**
- **Use only shielded interconnecting cables.**

---

## 17. DECLARATION OF CONFORMITY

---

**Name Manufacturer** : D&R Electronica b.v.  
**Address manufacturer** : Rijnkade 15-b,  
 : 1382 GS Weesp,  
 : Netherlands

declares that this product

**Name product** : AIRMATE-USB  
**Model number** : n.a.  
**Product options installed** : none

passed the following product specifications:

**Safety** : IEC 60065 (7<sup>th</sup> ed. 2001)

**EMC** : EN 55013 (2001+A1)  
 : EN 55020 (1998)

**Supplementary Information:**

The product passed the specifications of the following regulations;

Low voltage 72 / 23 / EEC  
 EMC-Directive 89 / 336 / EEC.  
 as amended by Directive 93/68/EEC

(\*) The product is tested in a normal user environment.