



Quick Start Guide

IRIS STARTER KIT



1 UNBOX AND CHECK


MAKE SURE THE FOLLOWING IS INCLUDED:

- Iris transmitter (TX-device)
- Iris receiver (RX-device)
- Antenna 2x
- Programming cable
- Power supply including plug adapters 2x



2 CONNECT TRANSMITTER UNIT

Audio source

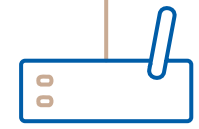

TX-device

- Insert the RCA cable from the audio source to the TX-device
- Insert the power adapter in the TX-device
- Attach the antenna to the TX-device

3 CONNECT RECEIVER UNIT

RX-device



Active speaker

- Connect the RCA output of the RX-device to your speaker or amplifier
- Insert the power adapter in the RX-device
- Attach the antenna to the RX-device

4 INSTALL IRIS CONFIGURATOR APP




Scan QR-code or visit

<https://streamit.eu/iris-configurator>

5 CREATE AUDIO NETWORK


- Start Iris configurator app
- Login as administrator
- Create site

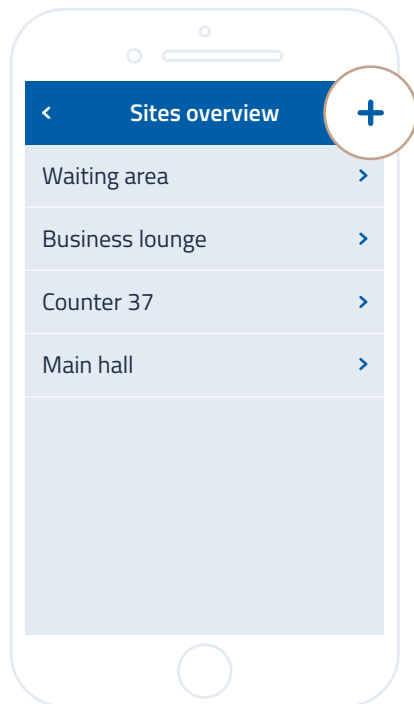

- Add audio network to site (use default pin 0000)


6 ADD RECEIVER

- Select audio network
- Start pairing

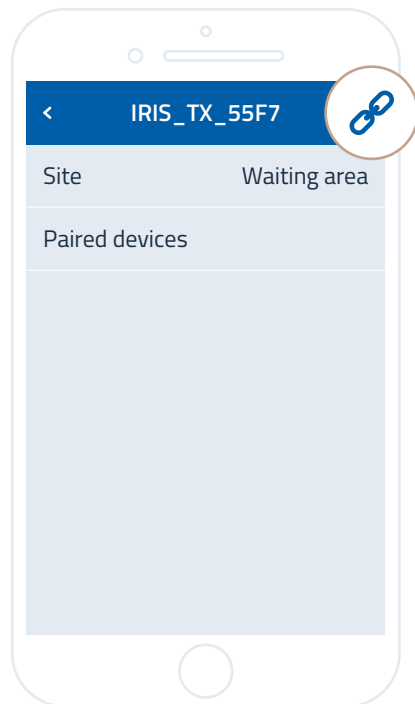

- Select RX-device to pair

7 ENJOY THE MUSIC

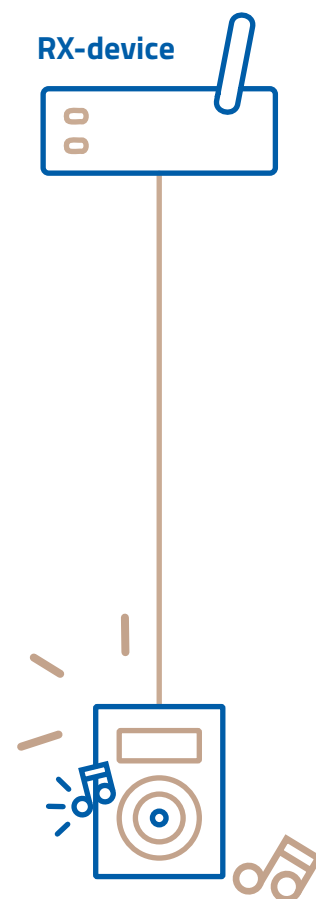

QUESTIONS?

Contact Streamit support
support@streamit.eu

+31 40 255 6036
(Netherlands)

+1 925 665 3222
(United States)

[STREAMIT.EU](https://streamit.eu)

STREAMIT