


NE8FDY-C6


EtherCon® Receptacle

Assembly Instructions


A Cable preparation

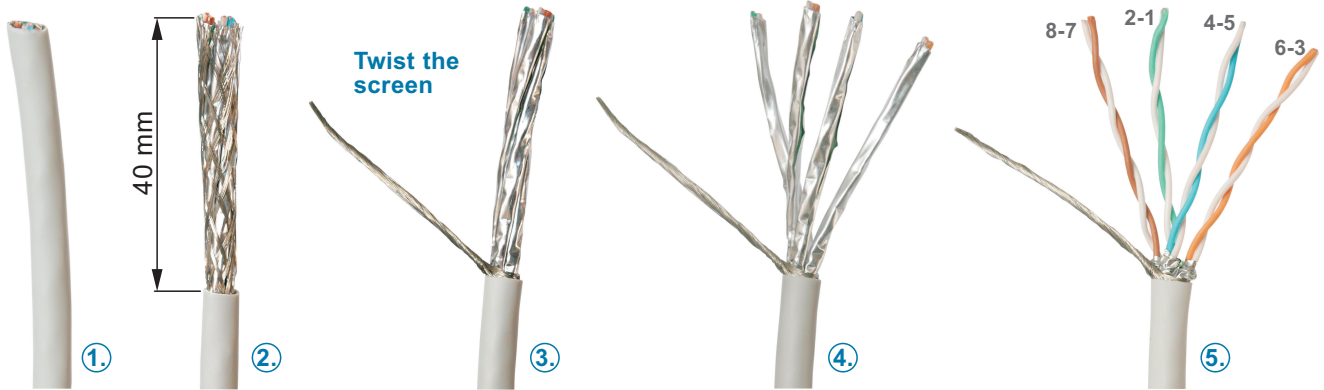


B Shielding

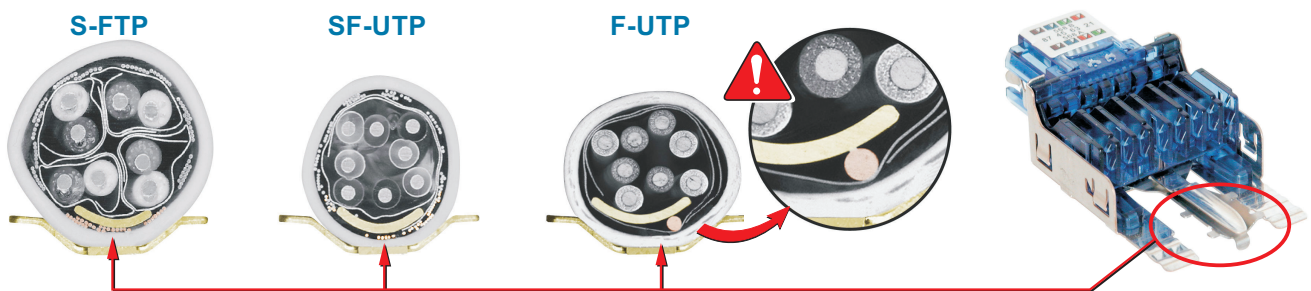


C Cable pairs separation

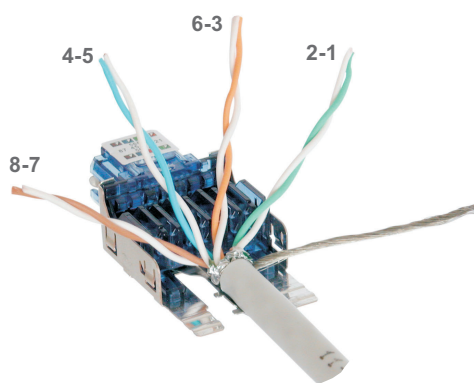


D Cable mount

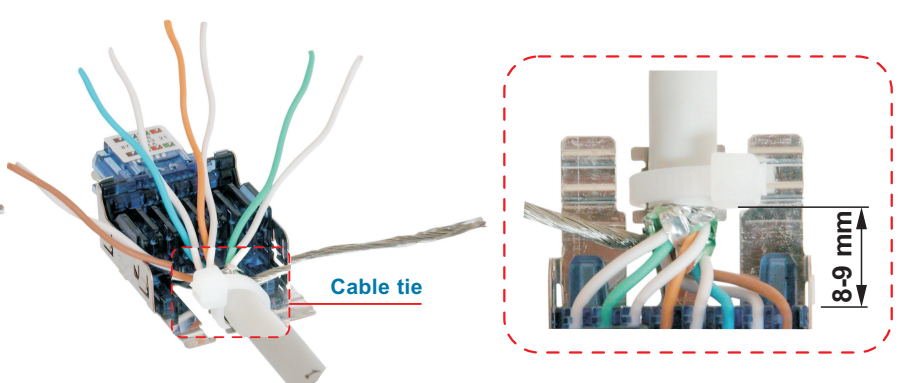


E Position wires acc. label

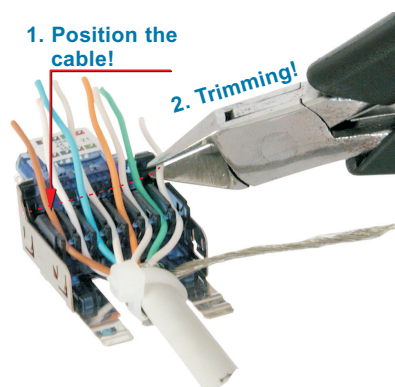


F Fix wires

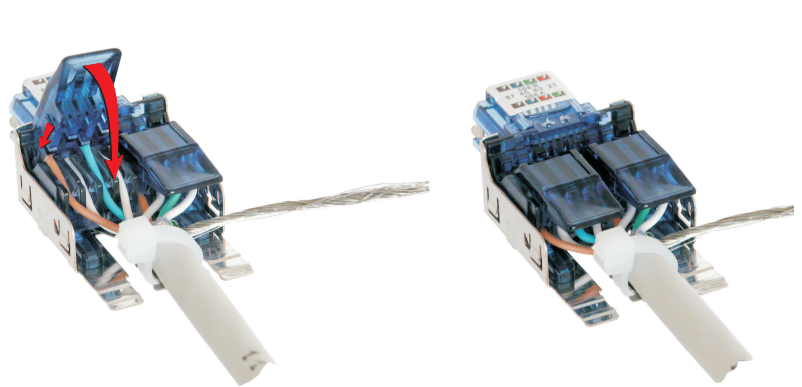


G Cover assembly

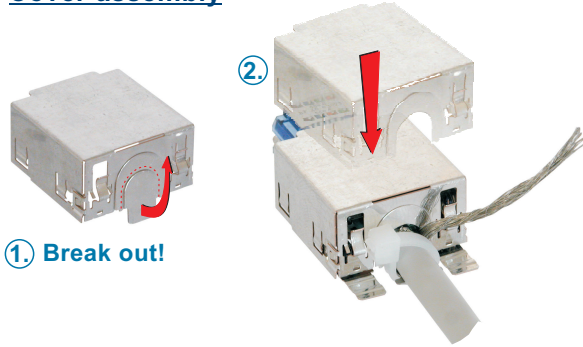

H Connect the screen

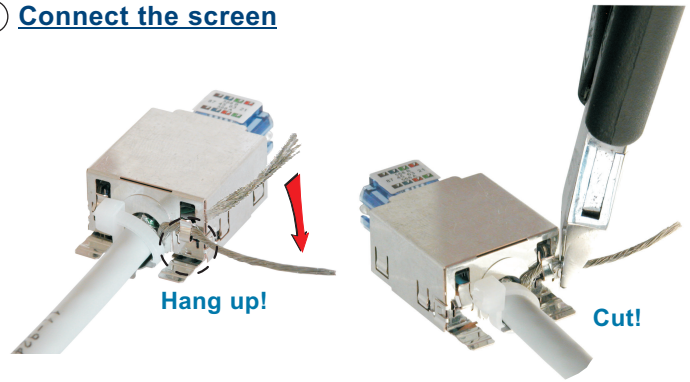


I Assembly the adapter

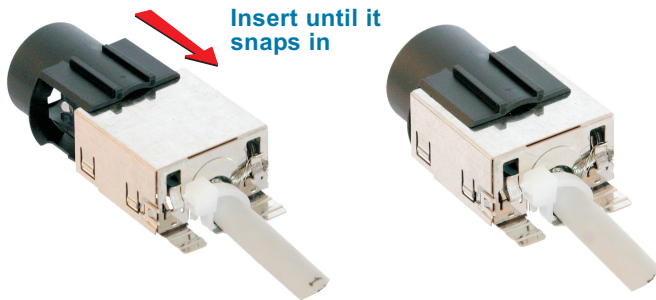


J Grounding option

Insert contact only if screen should be connected to front panel

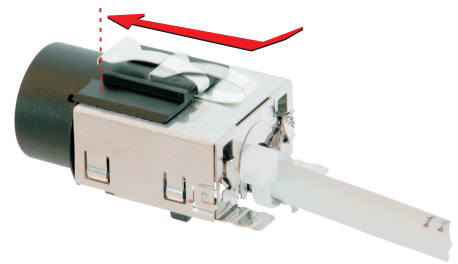

K Assembly the chassis

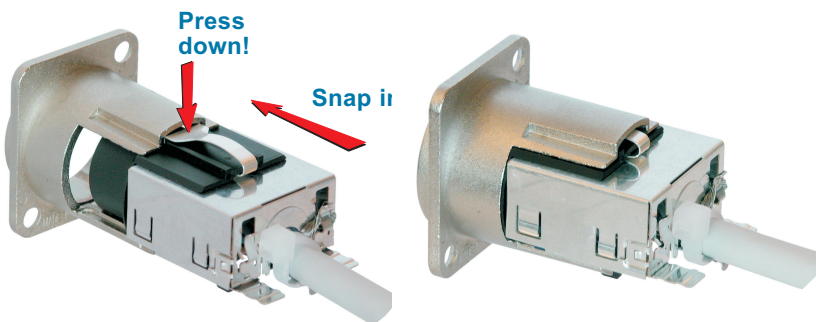

L Finish



Attention: Before assembly secure the housing in the device.

Please fix the cable additionally.


Note for Right-Angle Version

Working steps same as above.

Except:

Step B - References to step B and bend the reinforcement metal right angle below.

Step G - The cable outlet must not be interrupted.

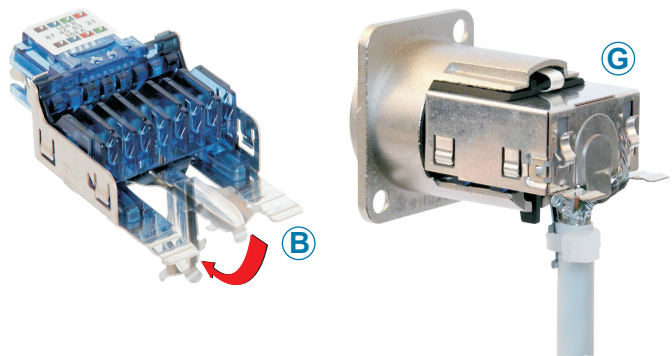

NEUTRIK AG
Liechtenstein
Tel.: +423/237 24 24
Fax: +423/232 53 93
www.neutrik.com

NEUTRIK Zürich AG
Switzerland
Tel.: +41 44/736 5010
Fax: +41 44/736 5011

NEUTRIK (UK) Ltd.
Great Britain
Tel.: +44 1983/811 441
Fax: +44 1983/811 439

NEUTRIK USA INC.
USA
Tel.: +1 732/901 9488
Fax: +1 732/901 9608

NEUTRIK Tokyo Ltd.
Japan
Tel.: +81 3/3663 4733
Fax: +81 3/3663 4796

NEUTRIK France
France
Tel.: +33 1/4131 6750
Fax: +33 1/4131 0511

NEUTRIK Vertriebs GmbH
Germany/Netherlands/Austria
Tel.: +49 8131/28 08 90
Fax: +49 8131/28 08-30

Draft. Nr.: BDA 188 / 3102M1561
Update: 09.02.2007



NEUTRIK
CONNECTING THE WORLD

Data subject to change without prior notice. © 2007 NEUTRIK®, ALL RIGHTS RESERVED.